


CYLINDER HEAD/VALVES

SYSTEM COMPONENTS

XR125LK/LEK shown:

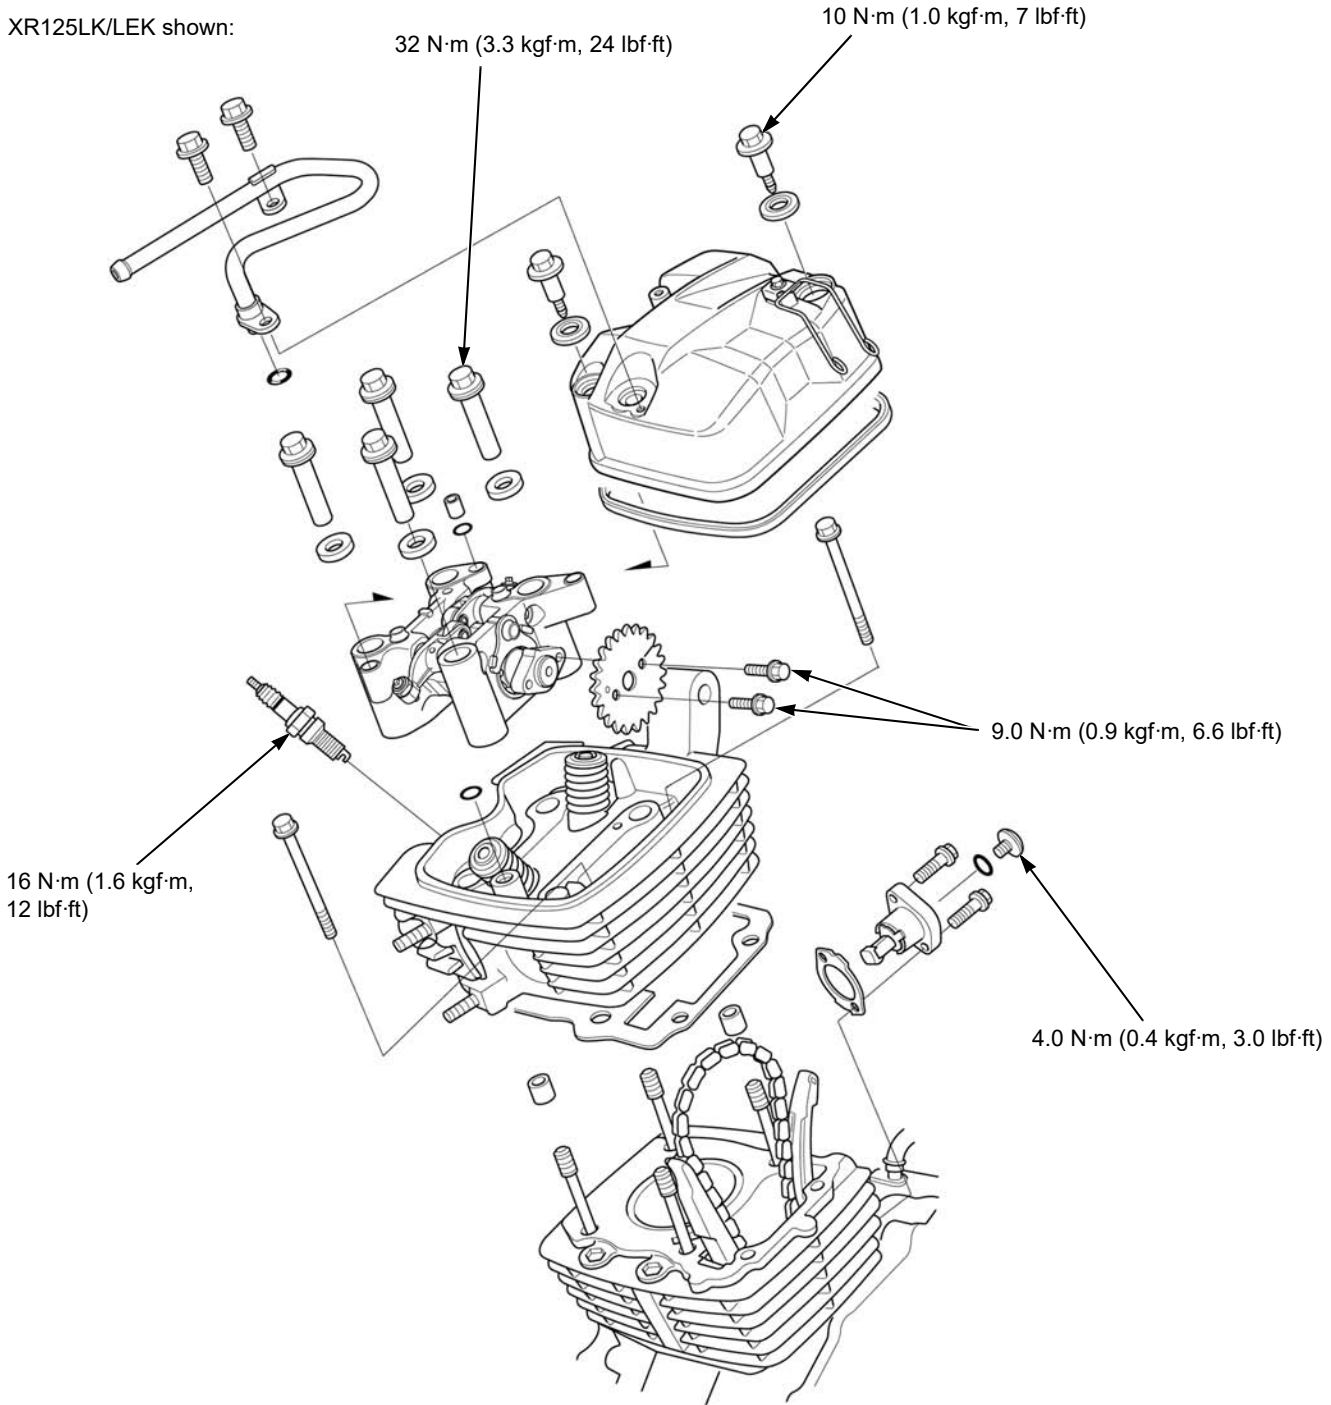

SERVICE INFORMATION

GENERAL

- This section covers service of the cylinder head, valves, rocker arms and camshaft.
- The camshaft can be serviced with the engine installed in the frame.
- The cylinder head service requires engine removal.
- Be careful not to damage the mating surfaces when removing the cylinder head cover and cylinder head. Do not strike the cylinder head cover and cylinder head too hard during removal.
- When disassembling, mark and store the disassembled parts to ensure that they are reinstalled in their original locations.
- Clean all disassembled parts with cleaning solvent and dry them by blowing them off with compressed air before inspection.
- Camshaft and rocker arm lubricating oil is fed through oil passages in the cylinder head and camshaft holder. Clean the oil passages before assembling cylinder head.