


CYLINDER HEAD/VALVES

Install a new gasket [1] and cam chain tensioner lifter [2] onto the cylinder.

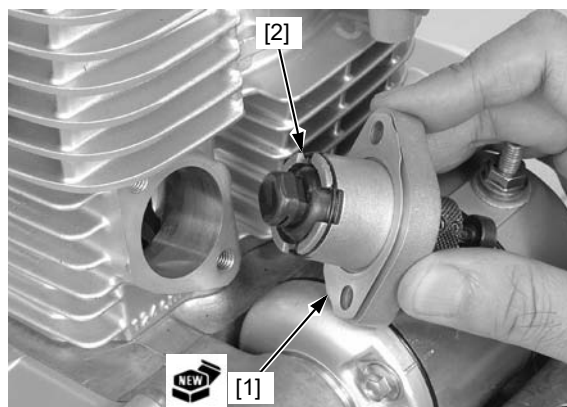

Install the two mounting bolts [1] and tighten them.

Remove the tensioner stopper from the tensioner lifter.

Coat a new O-ring [2] with engine oil and install it into the tensioner lifter groove.

Install the plug [3] and tighten it.

TORQUE: 4.0 N·m (0.4 kgf·m, 3.0 lbf·ft)

