

CLUTCH/GEARSHIFT LINKAGE


RIGHT CRANKCASE COVER

REMOVAL


Drain the engine oil (page 3-7).

When removing the kickstarter pedal, mark the pedal position to ensure the original position.

Remove the bolt [1] and kickstarter pedal [2].

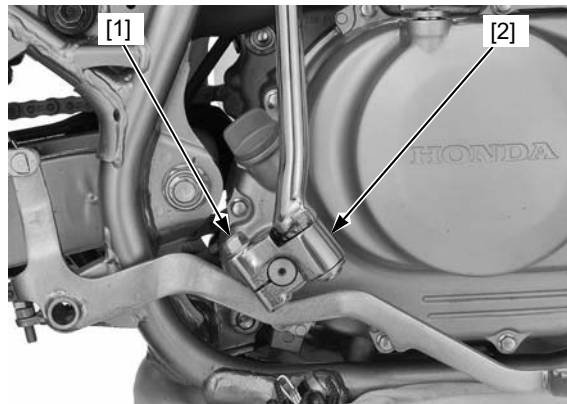


Remove the brake pedal return spring [1]. Disconnect the brake rod from the brake arm (page 15-4), then lower the brake pedal down.

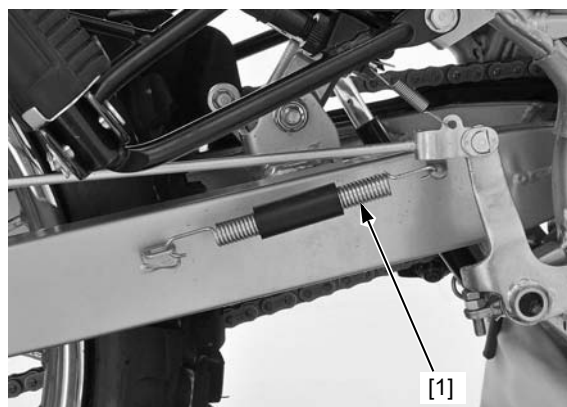

Remove the two bolts [1] and clutch cable stay [2], then disconnect the clutch cable.

Loosen the right crankcase cover bolts [3] in a crisscross pattern in 2 or 3 steps. Remove the bolts and right crankcase cover [4].

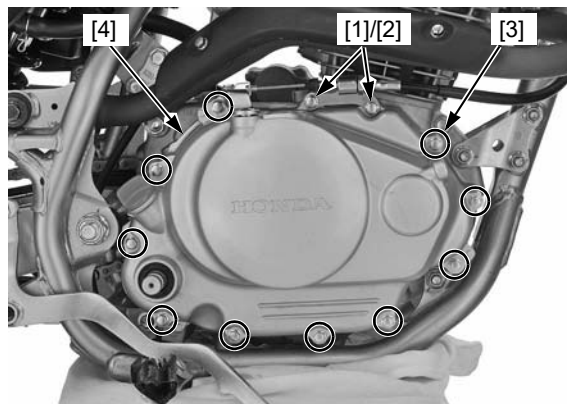

Remove the two dowel pins [1] and gasket [2].

INSTALLATION

Be careful not to damage the mating surfaces.

Clean off any gasket material from the right crankcase and cover mating surfaces.

Install the dowel pins and a new gasket.

