

KICKSTARTER

REMOVAL

Remove the right crankcase cover (page 10-4).
 Unhook the return spring [1] from the crankcase.

Remove the following:

- Kickstarter assembly [1]
- Ratchet spring [2]
- Washer [3]

INSTALLATION

Apply engine oil to the kickstarter drive gear teeth.
 Install the ratchet spring and washer to the spindle.
 Install the kickstarter assembly.

Hook the return spring [1] to the crankcase.
 Install the right crankcase cover (page 10-4).

DISASSEMBLY

Remove the following:

- Collar [1]
- Return spring [2]
- Starter ratchet gear [3]

