


## FRONT WHEEL/BRAKE/SUSPENSION/STEERING

### HANDLEBAR


#### REMOVAL

Remove the wire bands [1].  
Remove the rearview mirrors [2].

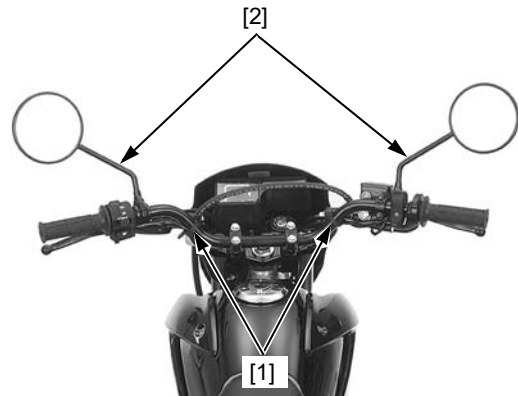


Remove the front visor [2] (page 2-4).

*XR125LK/LEK:* Disconnect the front brake light switch connectors [1].

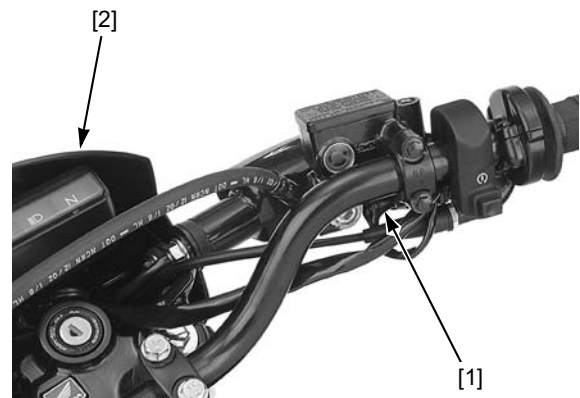

*XR125LK/LEK:* Remove the bolts [1], master cylinder holder [2] and master cylinder [3].

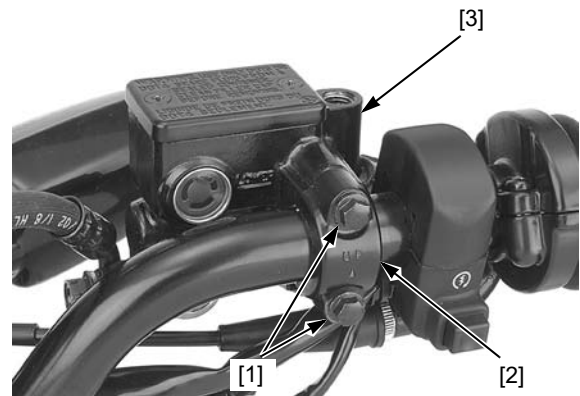

*XL125LK:* Remove the bolts [1], holder [2] and brake lever bracket [3].

