


FRONT WHEEL/BRAKE/SUSPENSION/STEERING

Install the wheel assembly onto the fork legs so that the brake disc is positioned between the pads, being careful not to damage the pads.

Align the groove on the speedometer gear box with the lug on the right fork leg as shown.


Install the front axle [1] from the right side.

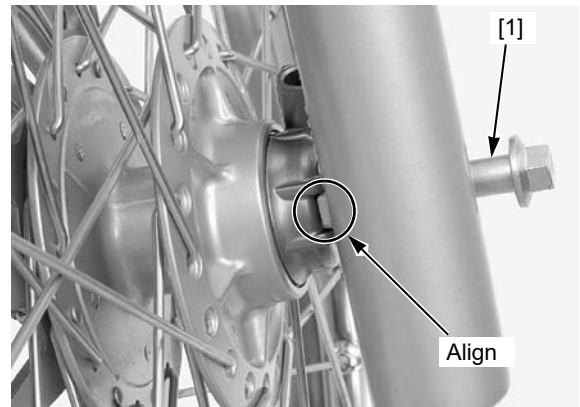

Install and tighten the front axle nut [1] to the specified torque.


TORQUE: 44 N·m (4.5 kgf·m, 32 lbf·ft)

Install the rubber cap [2] to the axle nut.

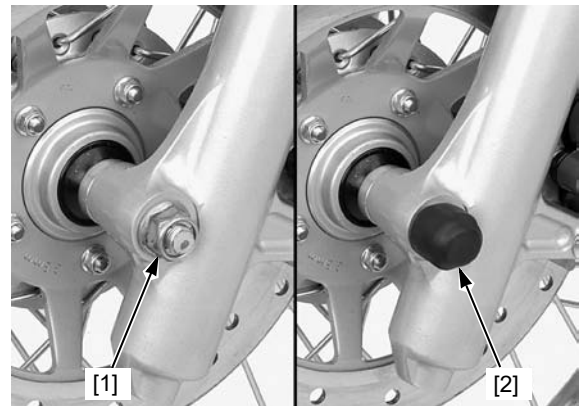

Connect the speedometer cable [1] to the gear box and secure it with the set screw [2].

With the front brake applied, pump the fork up and down several times to seat the axle and check the front brake operation.

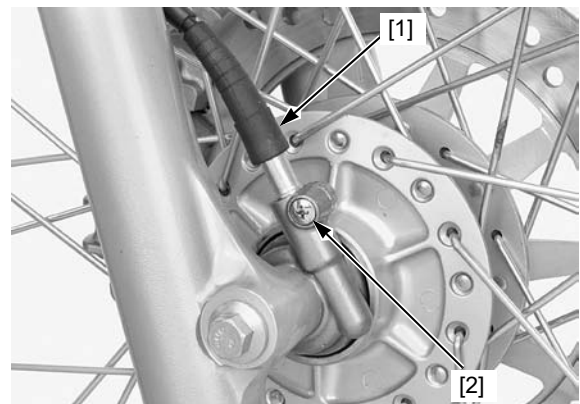

REMOVAL (XL125LK)

Raise and support the motorcycle using safety stand or a hoist.

Release the tab [1] while pushing it and disconnect the speedometer cable [2].

Remove the adjusting nut [3] and joint pin [4], and disconnect the brake cable [5] from the brake panel.

Remove the axle nut [6] and pull out the axle [7].

Remove the front wheel.

