


FRONT WHEEL/BRAKE/SUSPENSION/STEERING

Remove the following (XL125LK left fork only):


- Bolts [1]
- Brake cable guide [2]

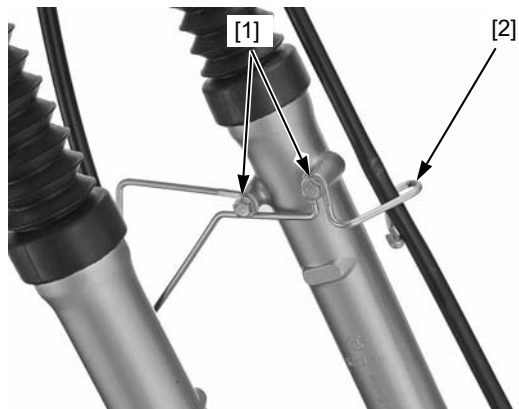

Loosen the top bridge pinch bolt [1].

Do not remove the fork cap yet.

Loosen the fork cap [2].

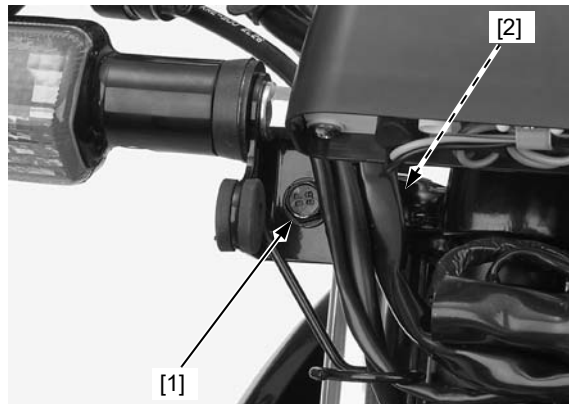

Loosen the fork bottom bridge pinch bolts [1] while holding the fork.
Remove the fork from the steering stem.



DISASSEMBLY

Loosen the boot band screw and remove the dust boot from the fork (XL125LK only).

*The fork cap is under spring pressure.
Wear an eye protector and a face protector while removing the cap.*

Remove the fork cap [1] and O-ring [2] from the fork pipe.

