



Remove the fork spring [1].  
Pour the fork fluid from the fork leg by pumping the fork 8 – 10 times.

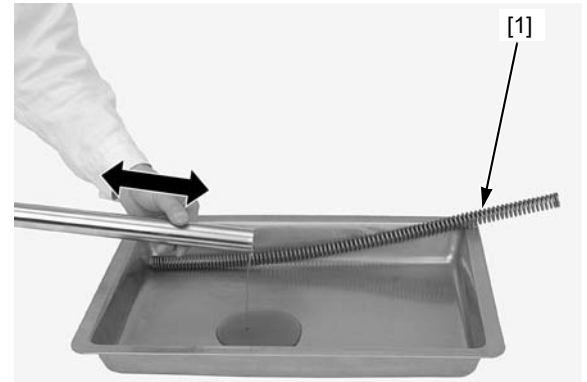

Hold the fork slider in a vise with a piece of wood or soft jaws to avoid damage.

Loosen and remove the fork socket bolt [1] and sealing washer from the fork slider.


If the fork piston turns with the socket bolt, temporarily install the fork spring, washer, spring spacer and fork cap.

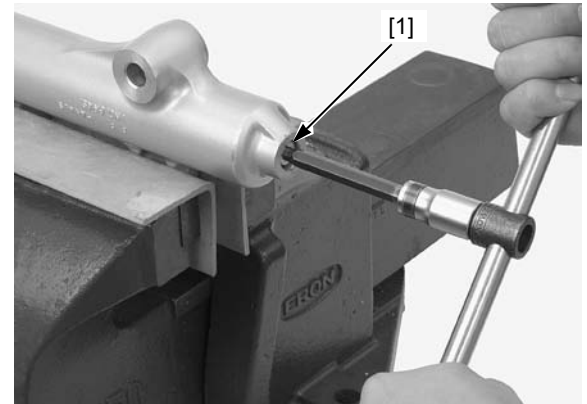

Remove the dust seal [1] from the fork slider.

*Do not scratch the fork pipe sliding surface.*

Remove the stopper ring [2] from the groove of the fork slider.

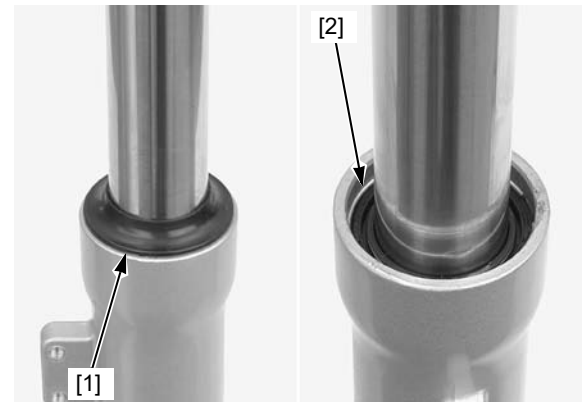

*Check that the fork pipe moves smoothly in the fork slider. If not, check the fork pipe for bending or damage, and bushings for wear or damage.*

Pull the fork pipe [1] out of the fork slider [2].  
Remove the oil lock piece [3] from the fork slider.

