


Hold the steering stem and remove the steering stem adjusting nut [1] with the special tool.


TOOL:

[2] Steering stem socket wrench 07916-KA50100

Remove the upper dust seal [3].

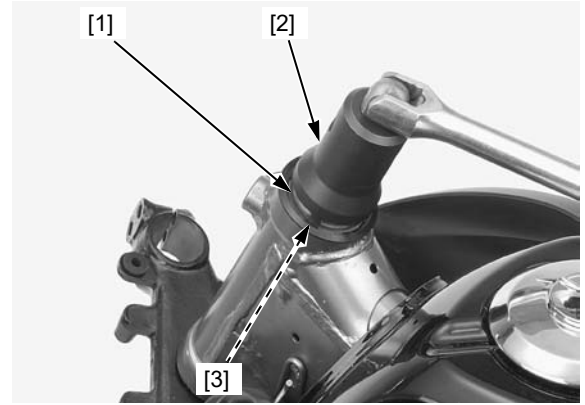


Remove the upper bearing inner race [1] and upper bearing [2].

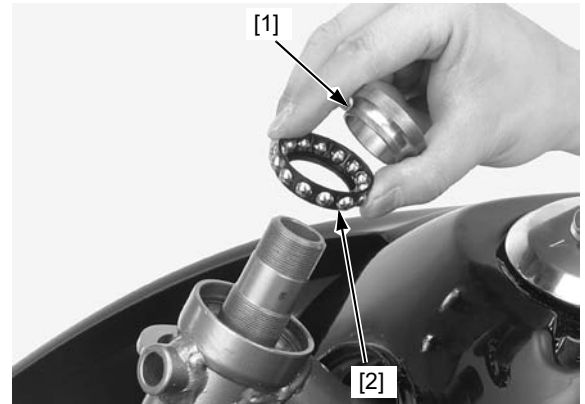

Remove the steering stem [1] from the steering head pipe.

Remove the lower bearing [2].

Check the steering bearings, inner and outer races for wear or damage.

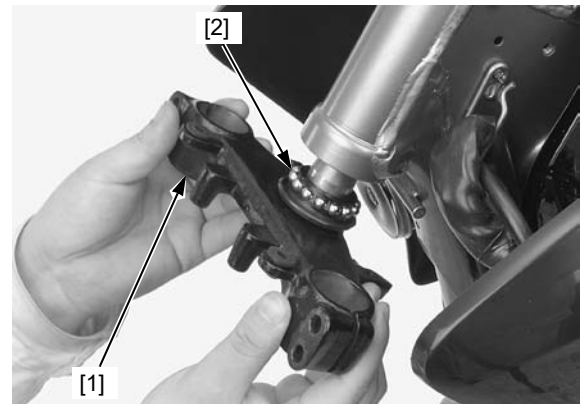

STEERING BEARING RACE REPLACEMENT

Always replace the bearings and races in pairs.

Remove the upper bearing outer race [1] and lower bearing outer race [2] with the following tools.

TOOLS:

[3] Ball race remover shaft 07944-1150001

**07944-1150001
07948-4630100**

[4] Ball race remover

