


FRONT WHEEL/BRAKE/SUSPENSION/STEERING

Apply urea based multi-purpose grease (page 1-15) to lip of a new upper dust seal [1] and install it. Install the steering stem adjusting nut [2]. Tighten the steering stem adjusting nut to the specified torque.

TOOL:

[3] Steering stem socket wrench 07916-KA50100

TORQUE: 5.0 N·m (0.5 kgf·m, 3.7 lbf·ft)

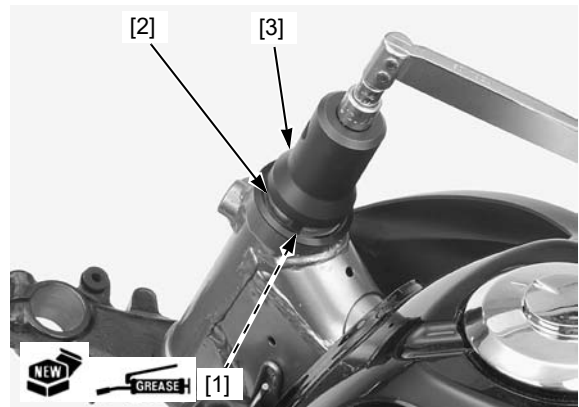

Turn the steering stem right and left to the end at least five times to seat the bearings.

Loosen the steering stem adjusting nut completely.




Retighten the adjusting nut to the specified torque.

TOOL:

[1] Steering stem socket wrench 07916-KA50100

TORQUE: 5.0 N·m (0.5 kgf·m, 3.7 lbf·ft)

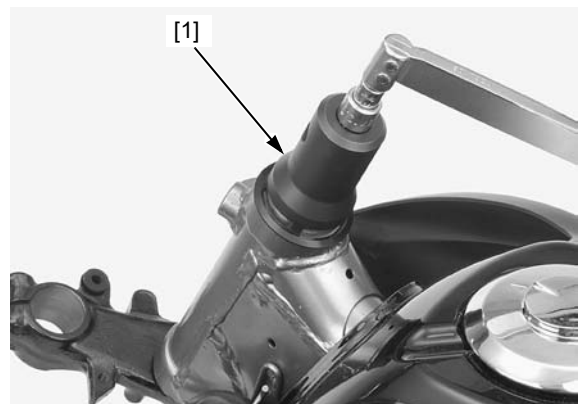

Install the top bridge [1].

Temporarily install the front fork (page 14-20).

Install the steering stem nut [2] and washer [3].

Tighten the steering stem nut to the specified torque with a special tool.

TORQUE: 103 N·m (10.5 kgf·m, 76 lbf·ft)

