


BRAKE PEDAL


REMOVAL

Remove the following:


- Brake adjusting nut [1]
- Brake rod [2] (from the joint pin)
- Rod spring [3]
- Joint pin [4]

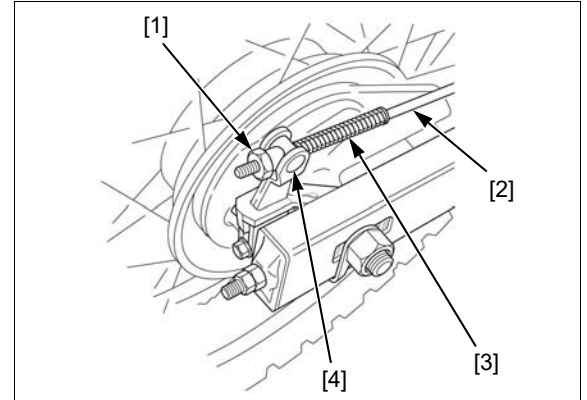

- Pedal return spring [1]
- Brake light switch spring [2]

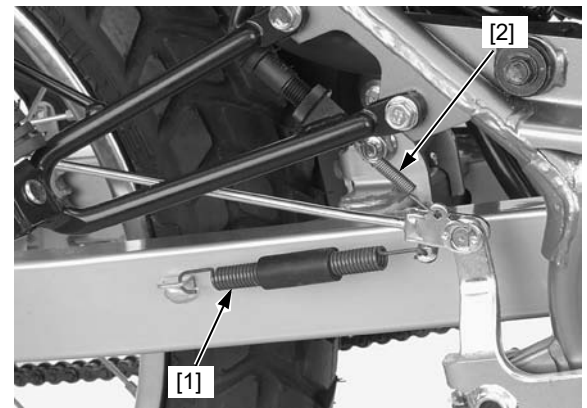

- Cotter pin [1]
- Washer [2]

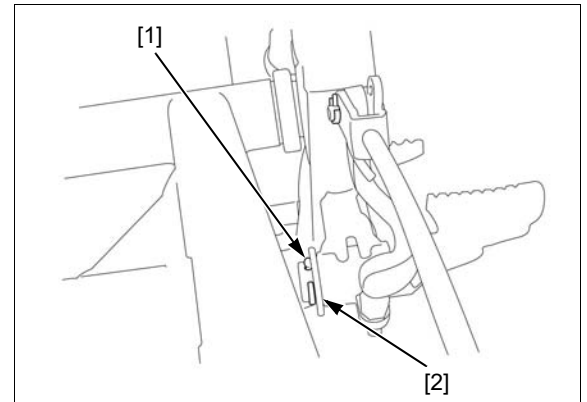

- Brake pedal [1]
- Dust seals [2]

