


HYDRAULIC BRAKE (XR125LK/LEK)

If the brake bleeder is not available, perform the following procedure.

Pump up the system pressure with the brake lever [1] until the lever resistance is felt.

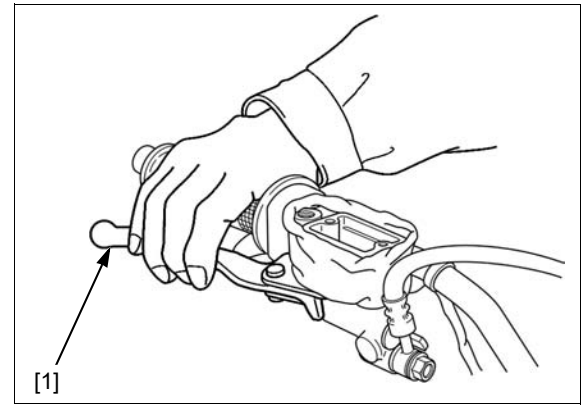


Do not release the brake lever until the bleed valve has been closed.

Connect a bleed hose [1] to the bleed valve [2] and bleed the system as follows:


1. Squeeze the brake lever all the way and loosen the bleed valve 1/2 of a turn. Wait several seconds and then close the bleed valve.
2. Release the brake lever slowly and wait several seconds after it reaches the end of its travel.
3. Repeat the steps 1 and 2 until there are no air bubbles in the bleed hose.

After bleeding the system completely, tighten the bleed valve.

TORQUE: 5.4 N·m (0.6 kgf·m, 4.0 lbf·ft)

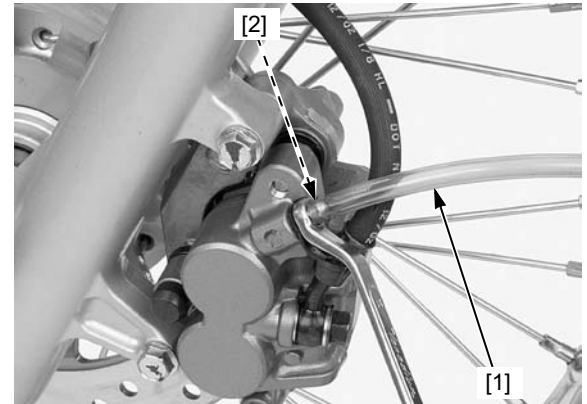

Fill the reservoir to the casting ledge [1] with DOT 3 or DOT 4 brake fluid from a sealed container.

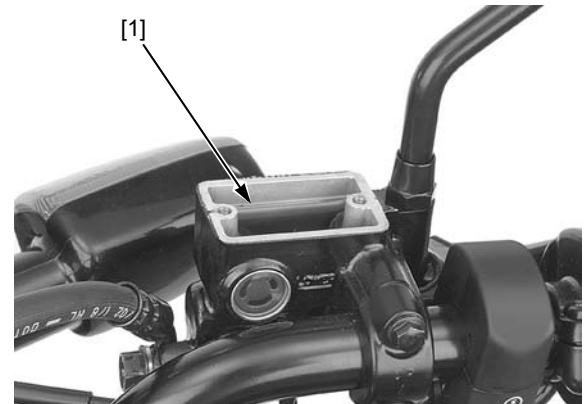

Install the diaphragm [1], set plate [2] and reservoir cap [3].

Install and tighten the screws [4] to the specified torque.

TORQUE: 1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)

