


HYDRAULIC BRAKE (XR125LK/LEK)


BRAKE PAD/DISC

BRAKE PAD REPLACEMENT

Remove the pad pin plug [1] and loosen the pad pin [2].

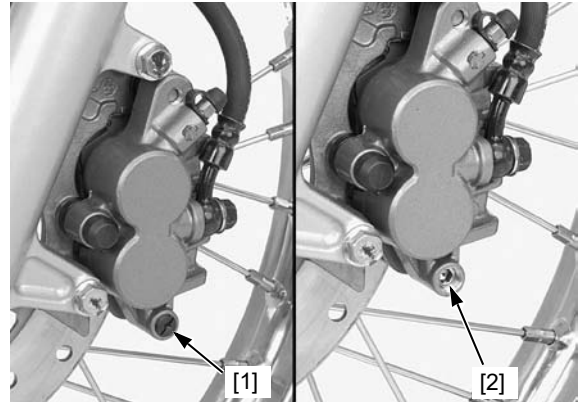


Remove the pad pin [1] while holding the brake pads [2], then remove the brake pads.

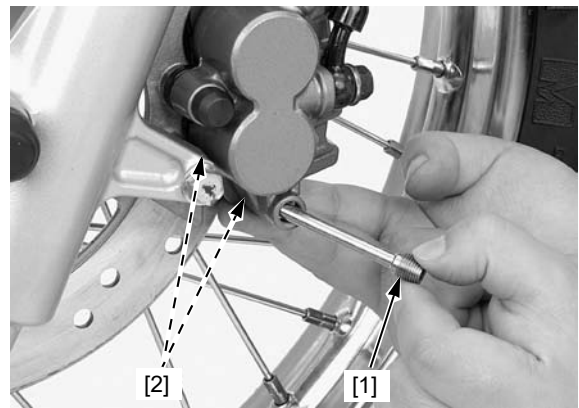

Make sure the pad spring is installed in position.

Install the brake pads [1] so that their ends rest on the pad retainer [2] on the caliper bracket properly.

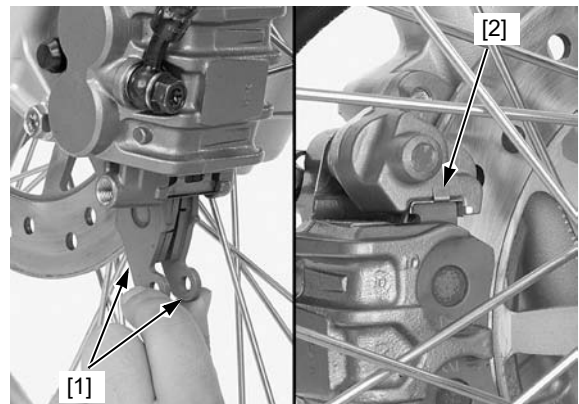

Install the pad pin [1] by pushing the pads against the pad spring to align the pad pin holes in the pads and caliper.

Tighten the pad pin.

TORQUE: 17.2 N·m (1.8 kgf·m, 13 lbf·ft)

Install and tighten the pad pin plug [2].

TORQUE: 2.5 N·m (0.3 kgf·m, 1.8 lbf·ft)

Operate the brake lever to seat the caliper pistons against the pads.

