

BATTERY



REMOVAL/INSTALLATION

Remove the left side cover (page 2-2).

Remove the bolt [1], collar [2] and battery holder [3]. Disconnect the negative (-) cable [4] first, and then the positive (+) cable [5]. Remove the battery [6].

Install the battery in the reverse order of removal.

- Connect the positive terminal first and then the negative cable.

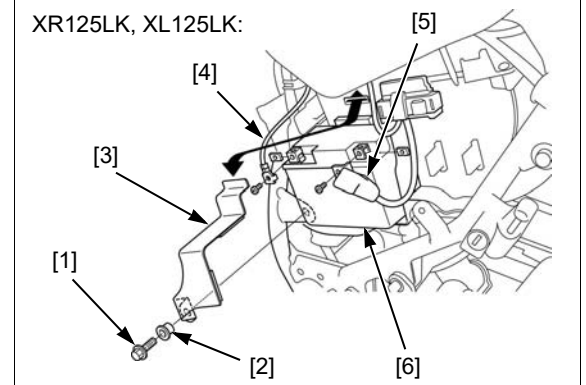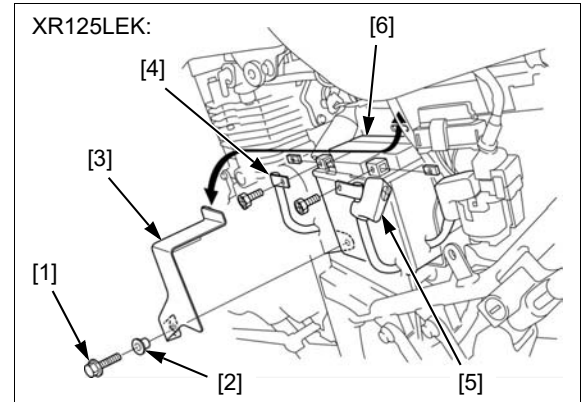


VOLTAGE INSPECTION

Measure the battery voltage using a commercially available digital multimeter.

VOLTAGE:

Fully charged: Above 12.8 V

Under charged: Below 12.3 V

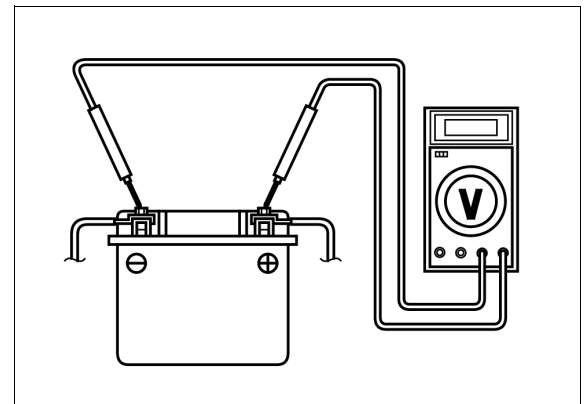

BATTERY CHARGING

- Quick charging should only be done in an emergency; slow charging is preferred.
- For battery charging, do not exceed the charging current and time specified on the battery. Using excessive current or extending the charging time may damage the battery.

Remove the battery (page 17-5).

*Turn power ON/
OFF at the charger,
not at the battery
terminals.*

Connect the charger positive (+) cable to the battery positive (+) terminal.

Connect the charger negative (-) cable to the battery negative (-) terminal.

CHARGING CURRENT/TIME:

XR125LEK:

Normal: 0.5 A x 5 – 10 h

Quick: 5.0 A x 0.5 h

XL125LK, XR125LK:

Normal: 0.4 A x 5 – 10 h

Quick: 4.0 A x 0.5 h

