


IGNITION SWITCH

INSPECTION

Remove the front visor (page 2-4).

Disconnect the ignition switch 2P connector [1].

Check for continuity between the connector terminals in each switch position according to the chart (page 19-2).

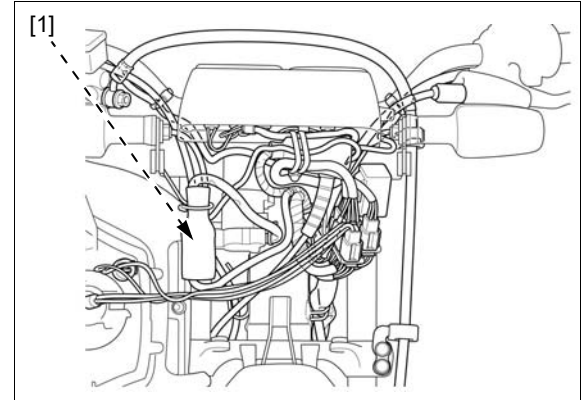


REMOVAL/INSTALLATION

Disconnect the ignition switch connector (page 18-7).

Remove the two mounting bolts [1] and the ignition switch [2].

Install the ignition switch in the reverse order of removal.

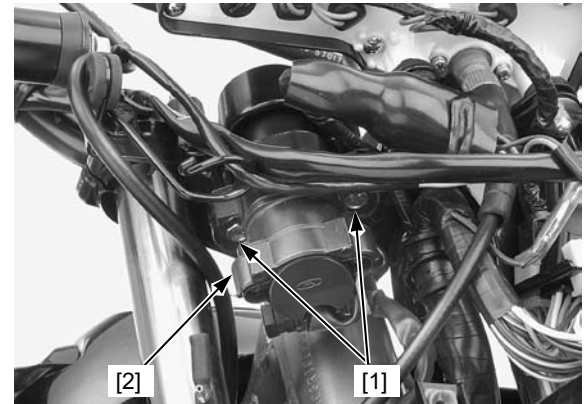

HANDLEBAR SWITCHES

Remove the front visor (page 2-4).

Right handlebar switch: Disconnect the right handlebar switch 6P connector [1].

Left handlebar switch: Disconnect the left handlebar switch 9P (Black) connector [2] and wire connector [3].

Check for continuity between the connector terminals in each switch position according to the chart (page 19-2).

