

INDEX

AIR CLEANER	3-4	IGNITION SYSTEM INSPECTION	4-4
AIR CLEANER HOUSING	6-4	IGNITION TIMING	4-5
AIR CLEANER SUB FILTER (XR125LK/LEK)	3-4	KICKSTARTER	12-15
ALTERNATOR CHARGING COIL	17-7	KICKSTARTER IDLE GEAR	12-14
BATTERY	17-5	LEFT CRANKCASE COVER	11-3
BRAKE CALIPER	16-9	LICENSE LIGHT (XR125LK/LEK)	18-5
BRAKE FLUID (XR125LK/LEK)	3-12	LIGHTING SYSTEM INSPECTION	18-3
BRAKE FLUID REPLACEMENT/AIR BLEEDING	16-4	LUBRICATION & SEAL POINTS	1-14
BRAKE LIGHT SWITCH	3-14	LUBRICATION SYSTEM DIAGRAM	7-2
BRAKE LIGHT SWITCHES	18-8	MAINTENANCE SCHEDULE	3-2
BRAKE PAD/DISC	16-6	MASTER CYLINDER	16-7
BRAKE PEDAL	15-9	MODEL IDENTIFICATION	1-2
BRAKE SHOE/PAD WEAR	3-12	NEUTRAL DIODE	5-8
BRAKE SYSTEM	3-13	NEUTRAL SWITCH	18-9
BRAKE/TAIL LIGHT	18-4	NUMBER PLATE BRACKET	2-3
CABLE & HARNESS ROUTING		NUTS, BOLTS, FASTENERS	3-16
XL125LK	1-24	OIL PUMP	7-3
XR125LK/LEK	1-16	PILOT SCREW ADJUSTMENT	6-12
CAM CHAIN TENSIONER LIFTER	8-17	PISTON	9-5
CAMSHAFT	8-5	PRIMARY DRIVE GEAR	10-13
CAMSHAFT HOLDER	8-8	REAR CARRIER	2-2
CARBURETOR	6-5	REAR COWL	2-3
CARBURETOR HEATER (EXCEPT CO, III LA TYPES)	6-10	REAR DRUM BRAKE	15-7
CHARGING SYSTEM INSPECTION	17-6	REAR WHEEL	15-4
CLUTCH	10-7	REGULATOR/RECTIFIER	17-7
CLUTCH SWITCH	18-9	RIGHT CRANKCASE COVER	10-4
CLUTCH SYSTEM	3-15	SEAT	2-2
COMBINATION METER	18-6	SECONDARY AIR SUPPLY SYSTEM (XR125LK/LEK)	
COMPONENT LOCATION		FUEL SYSTEM	6-13
BATTERY/CHARGING SYSTEM	17-2	MAINTENANCE	3-9
ELECTRIC STARTER	5-2	SERVICE INFORMATION	
IGNITION SYSTEM	4-2	BATTERY/CHARGING SYSTEM	17-3
LIGHTS/METER/SWITCHES	18-2	CLUTCH/GEARSHIFT LINKAGE/KICKSTARTER	10-3
CRANKCASE BREATHER	3-5	CRANKCASE/CRANKSHAFT/TRANSMISSION	12-3
CRANKCASE SEPARATION/ASSEMBLY	12-4	CYLINDER HEAD/VALVES	8-2
CRANKSHAFT	12-13	CYLINDER/PISTON	9-3
CYLINDER	9-4	ELECTRIC STARTER	5-3
CYLINDER COMPRESSION	8-3	ENGINE REMOVAL/INSTALLATION	13-2
CYLINDER HEAD	8-11	FRONT WHEEL/SUSPENSION/STEERING	14-3
CYLINDER HEAD COVER	8-4	FUEL SYSTEM	6-2
DRIVE CHAIN	3-9	HYDRAULIC BRAKE	16-3
DRIVE CHAIN SLIDER	3-11	IGNITION SYSTEM	4-3
DRIVE SPROCKET COVER	2-5	LIGHTS/METER/SWITCHES	18-2
EMISSION CONTROL SYSTEMS	1-30	LUBRICATION SYSTEM	7-3
ENGINE IDLE SPEED	3-8	REAR WHEEL/BRAKE/SUSPENSION	15-3
ENGINE INSTALLATION	13-5	SERVICE RULES	1-2
ENGINE OIL	3-7	SHOCK ABSORBER	15-11
ENGINE OIL CENTRIFUGAL FILTER	3-8	SIDE COVER	2-2
ENGINE OIL STRAINER SCREEN	3-7	SIDE SHROUD	2-4
ENGINE REMOVAL	13-3	SIDESTAND	3-16
EXHAUST PIPE/MUFFLER	2-6	SIDESTAND SWITCH (NZ TYPE)	18-10
FLYWHEEL/STARTER CLUTCH	11-4	SPARK PLUG	3-5
FORK	14-13	SPECIFICATIONS	1-3
FRONT DRUM BRAKE (XL125LK)	14-13	STARTER MOTOR	5-5
FRONT FENDER	2-5	STARTER RELAY	5-7
FRONT VISOR	2-4	STATOR/IGNITION PULSE GENERATOR	11-4
FRONT WHEEL	14-9	STEERING HEAD BEARINGS	3-17
FUEL STRAINER SCREEN	3-3	STEERING STEM	14-22
FUEL TANK	2-4	SUSPENSION	3-16
GEARSHIFT LINKAGE	10-10	SWINGARM	15-13
HANDLEBAR	14-4	SYSTEM COMPONENTS	
HANDLEBAR SWITCHES	18-7	ALTERNATOR/STARTER CLUTCH	11-2
HEADLIGHT AIM	3-15	CLUTCH/GEARSHIFT LINKAGE/KICKSTARTER	10-2
HEADLIGHT/POSITION LIGHT	18-4	CRANKCASE/CRANKSHAFT/TRANSMISSION	12-2
HORN	18-11	CYLINDER HEAD/VALVES	8-2
ICM (IGNITION CONTROL MODULE)	4-6	CYLINDER/PISTON	9-2
IGNITION COIL	4-6	ENGINE REMOVAL/INSTALLATION	13-2
IGNITION SWITCH	18-7	FRONT WHEEL/SUSPENSION/STEERING	14-2
		FUEL SYSTEM	6-2