



HOW TO USE THIS MANUAL

Sections 1 through 3 apply to the whole motorcycle, while sections 4 through 16 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration general instructions/specifications, torque values, working practices, tools and troubleshooting for the section. The subsequent pages give detailed procedures for the section.

If you don't know what the source of the trouble is, read section 18, TROUBLESHOOTING.

If you are not familiar with this motorcycle, read section 17 TECHNICAL FEATURES.

Refer to Section 19 for 1982 service information.

Refer to section 20 for European and General type information.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING.

HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATEVER.

NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD.
Service Publications Office

CONTENTS

	GENERAL INFORMATION	1
	LUBRICATION	2
	MAINTENANCE	3
ENGINE	FUEL SYSTEM	4
	ENGINE REMOVAL/INSTALLATION	5
	CYLINDER HEAD/VALVES	6
	CYLINDER/PISTON	7
	CLUTCH/OIL PUMP	8
	AC GENERATOR	9
	CRANKCASE	10
	CRANKSHAFT/BALANCER	11
	TRANSMISSION	12
CHASSIS	FRONT WHEEL/BRAKE/SUSPENSION/STEERING	13
	REAR WHEEL/BRAKE/SUSPENSION	14
	REAR FENDER/EXHAUST PIPE	15
ELECTRICAL	IGNITION SYSTEM	16
	TECHNICAL FEATURES	17
	TROUBLESHOOTING	18
	'82 XR500R ADDENDUM	19
	XR500R EUROPEAN/GENERAL TYPE	20