




MAINTENANCE

Minor adjustments are made with the upper adjuster.
Adjust free play by loosening the lock nut and turning the adjuster.
Tighten the lock nut.

Recheck throttle operation. Replace any damaged parts.

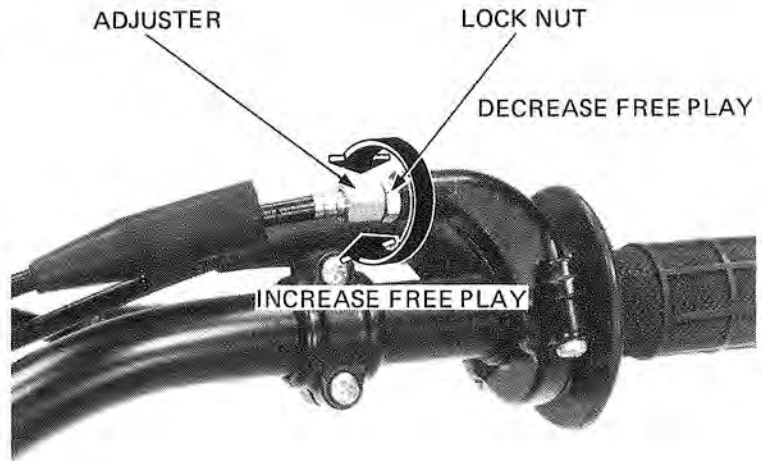

CHOKE LEVER

Check choke lever operation.
If the choke lever moves stiffly, clean and lubricate the pivot. After cleaning, recheck the lever's movement.



CHOKE LEVER

AIR CLEANER

Remove the right side cover.
Remove the air cleaner cover.



AIR CLEANER COVER