




MAINTENANCE

HEADLIGHT AIM

Adjust the vertical beam by turning the adjusting screw on the headlight cover.

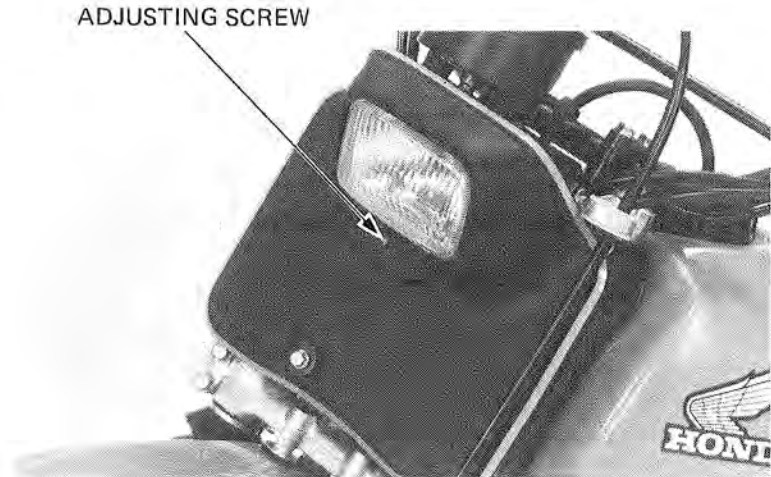

CLUTCH

Measure the clutch free play at the lever end.

FREE PLAY: 15 – 25 mm (5/8 – 1 in)



Adjust as follows:
Minor adjustments are made with the upper adjuster.

Pull the cover back.
Loosen the lock nut and turn the adjuster.
Tighten the lock nut and install the cover.

