



MAINTENANCE


SIDE STAND

Check the side stand spring for damage and loss of tension.

Check that the side stand assembly is not bent and moves freely.

Tighten the pivot bolt if necessary.

TORQUE: 35–45 N·m (3.5–4.5 kg·m, 25–33 ft·lb)

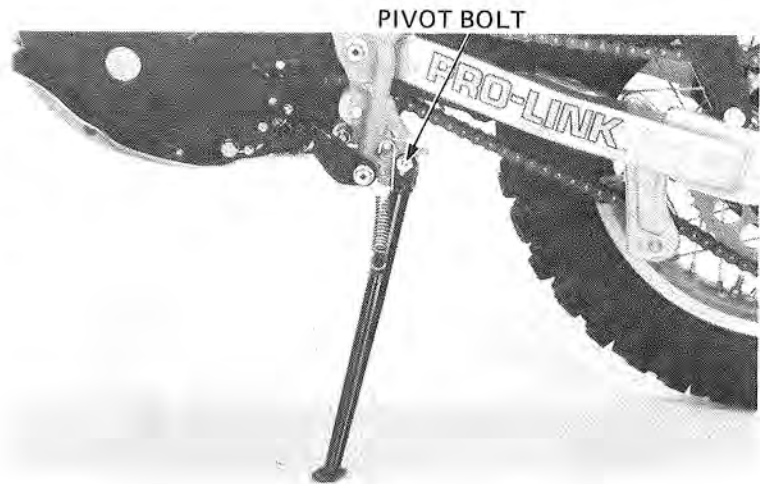

WHEEL/SPOKES

TIRE PRESSURE

NOTE

The pressure should be checked when the tires are COLD.

Tire pressure:

Front: 100 kPa (1.0 kg/cm², 14 psi)

Rear: 80 kPa (0.8 kg/cm², 11 psi)

Tire size:

Front: 3.00-21-6PR

Rear: 5.10-17-6PR



Check the tire for cuts, imbedded nails or other sharp objects.

Check the tread depth.

SERVICE LIMIT: 8 mm (0.3 in)

Tighten the wheel spokes and rim lock.

TORQUE VALUES:

SPOKE NIPPLE:

2–4.5 N·m (0.2–0.45 kg·m, 1.4–3.2 ft·lb)

RIM LOCK:

10–15 N·m (1.0–1.5 kg·m, 7–11 ft·lb)

