



SERVICE INFORMATION	4-1
TROUBLESHOOTING	4-2
FUEL TANK	4-3
AIR CLEANER CASE REMOVAL	4-4
CRANKCASE BREATHER	4-4
CARBURETOR REMOVAL	4-5
CARBURETOR DISASSEMBLY	4-5
CARBURETOR ASSEMBLY	4-8
FLOAT LEVEL ADJUSTMENT	4-8
CARBURETOR INSTALLATION	4-8
PILOT SCREW ADJUSTMENT	4-9
TEMPERATURE AND ALTITUDE	4-9

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- When disassembling fuel system parts, note the locations of the O-rings. Replace them with new ones on reassembly.
- The carburetor float bowl has a drain plug that can be loosened to drain residual gasoline.

SPECIFICATIONS

Fuel tank capacity	9 lit (2.4 US gal, 1.9 Imp gal)
Reserve capacity	3 lit (0.8 US gal, 0.6 Imp gal)
Carburetor	
Type	Piston valve
Identification number	PD11B
Jet needle setting	3rd groove
Float level	14.5 mm (0.57 in)
Pilot screw opening	2-1/4 turns out
Main jet	152
Slow jet	# 55
Idle speed	1,200 ± 100 rpm
Air cut-off valve operating press.	390 mmHg (15.3 inHg)
Throttle grip free play	2-6 mm (1/8-1/4 in)

TOOL

Float level gauge	07401-0010000
-------------------	---------------

TORQUE VALUE

Fuel tank mounting bolt	10-14 N·m (1.0-1.4 kg·m, 7-10 ft·lb)
-------------------------	--------------------------------------