



### FUEL TANK

#### FUEL TANK REMOVAL

Remove the seat.  
Turn the fuel valve OFF and disconnect the fuel tube.  
Remove the mounting bolts and tank.

**WARNING**

*Keep gasoline away from flames or sparks.  
Wipe up spilled gasoline at once.*

Check that fuel flows out of the fuel valve freely.  
If flow is restricted, clean the fuel strainer.

#### FUEL TANK INSTALLATION

Install the fuel tank with the two mounting bolts.  
Connect the fuel tube.  
Install the seat.

**NOTE**

- After assembling, make sure there are no fuel leaks.
- Do not overtighten the fuel valve bolts.

