



CARBURETOR REMOVAL

Remove the seat and fuel tank.
Remove the left and right side covers.

Disconnect the throttle cables.
Loosen the drain screw and drain the fuel.


WARNING

*Keep gasoline away from flames or sparks,
Wipe up spilled gasoline at once.*

Loosen the screws securing the carburetor bands.
Remove the carburetor.

NOTE

Do not pry between the insulator and engine.
Carefully pull it back, away from the engine.

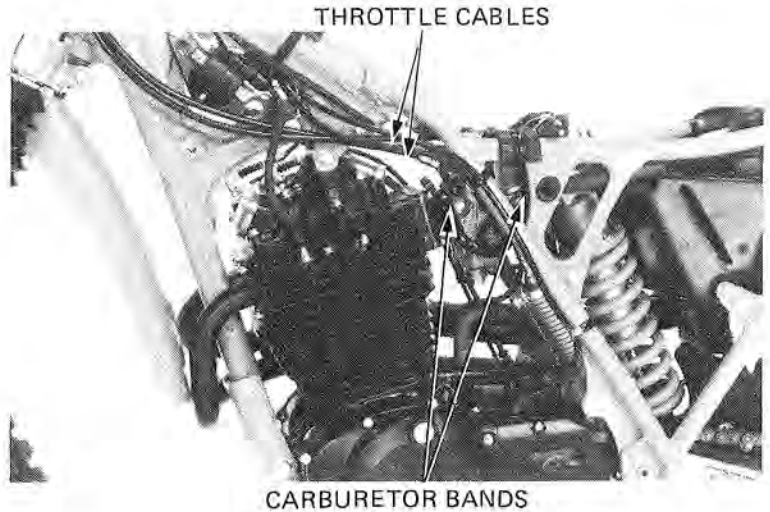

CARBURETOR DISASSEMBLY

