




FUEL SYSTEM

Check each part for wear or damage.
Blow open all jets and passages with compressed air.

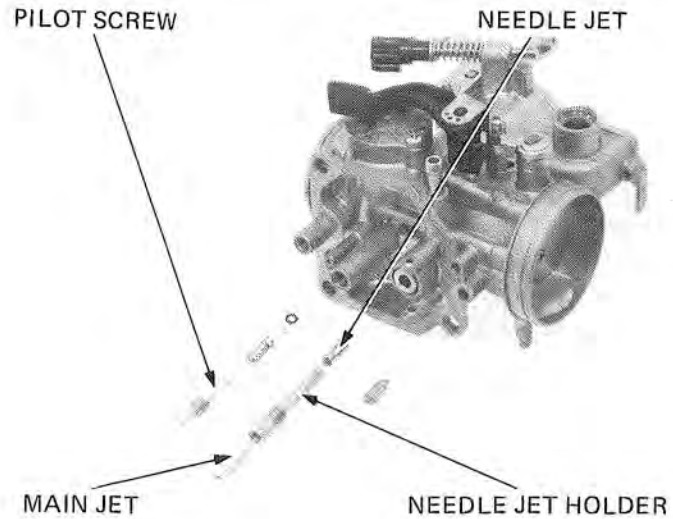

CARBURETOR ASSEMBLY


NOTE

- Use new O-rings whenever the carburetor is reassembled.
- Handle all jets and needles with care. They can easily be scored or scratched.
- Be sure to install the top cover screw washers during assembly.

Assemble the carburetor in the reverse order of disassembly. Turn the pilot screw to the position recorded during disassembly.

Install the jet needle clip on the jet needle.

STANDARD: 3rd groove

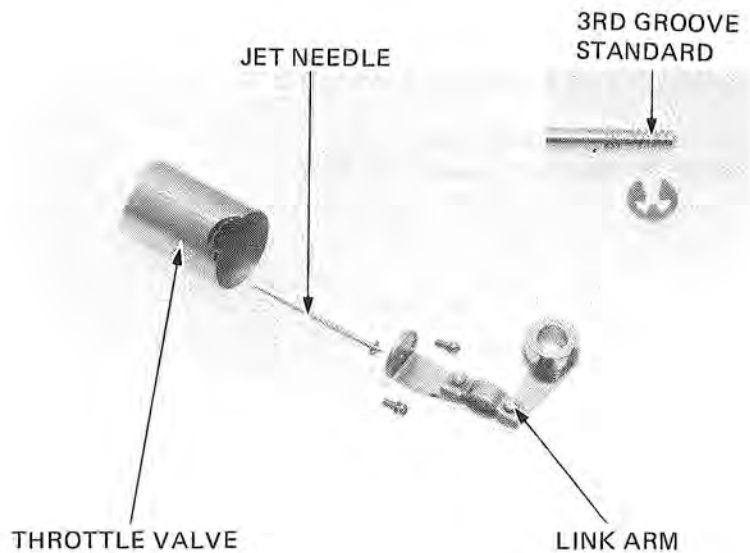

FLOAT LEVEL ADJUSTMENT

Adjust the float level by carefully bending the float arm until the float tip just contacts the float valve.

FLOAT LEVEL: 14.5 mm (0.57 in)

CARBURETOR INSTALLATION

Install the carburetor in the reverse order of removal.

Adjust the throttle grip free play (Page 3–5).

