


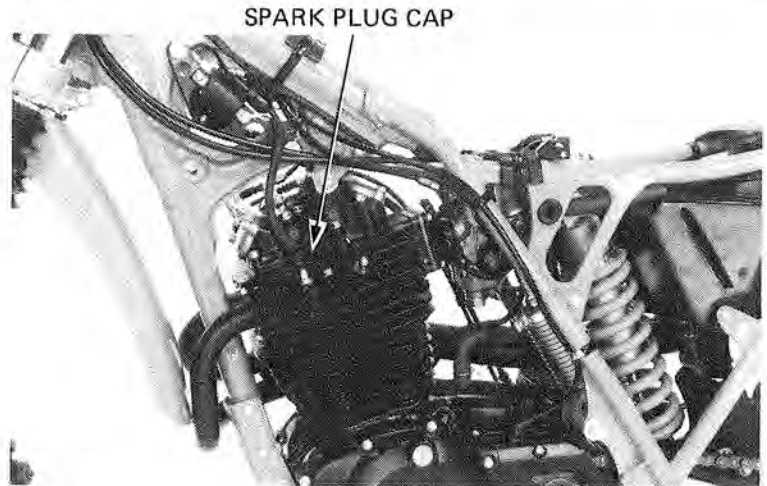


Remove the spark plug cap.
Remove the wire harness bands.

Disconnect the crankcase breather tube from the engine.
Remove the carburetor.



Remove the left foot peg.
Loosen the rear axle nut.
Turn the chain adjuster to loosen the chain.
Remove the drive sprocket cover.

Remove the chain clip and the master link.

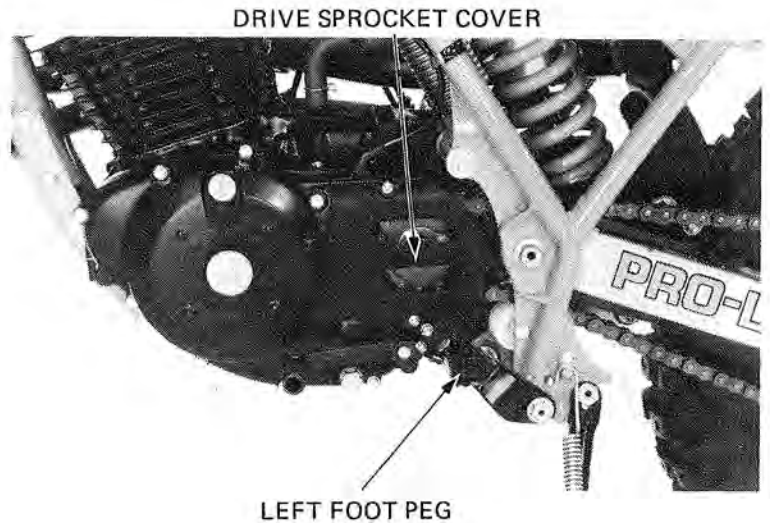

Place a jack or padded block under the engine.
Remove the upper engine hanger bolts.

Remove the front engine hanger bracket.
Remove the rear engine hanger bolts.
Lower the jack and remove the engine.

