





**CYLINDER HEAD/VALVES**

**CYLINDER HEAD COVER REMOVAL**

Remove the engine from the frame (See Section 5).  
Loosen the decompressor cable lock nut and remove the cable from the holder.  
Disconnect the cable from the valve lifter lever.  
Remove the valve cover.

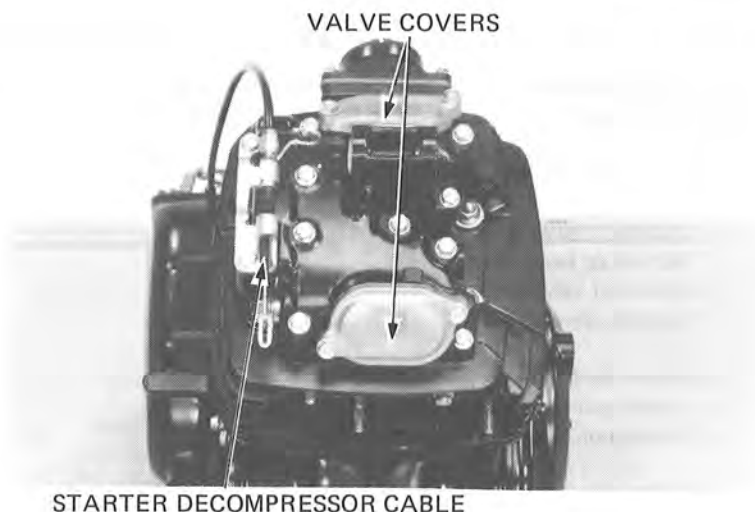

Remove the cylinder head cover bolts and nut.  
Remove the cylinder head cover.

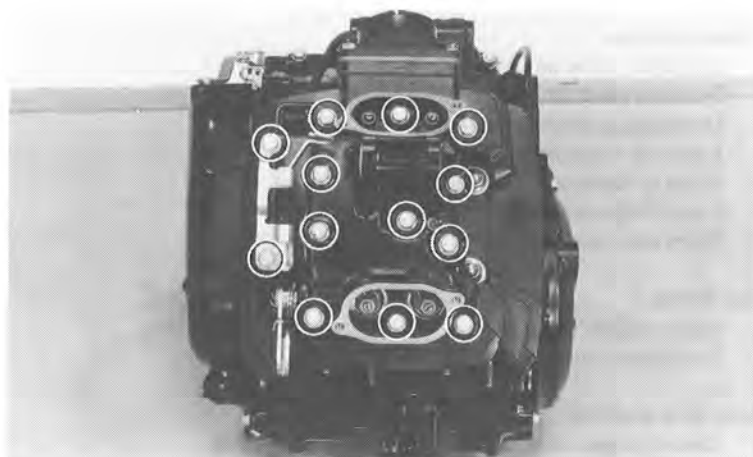

**CYLINDER HEAD COVER DISASSEMBLY**

Notch the dowel pins as shown using a rotary grinder.

**CAUTION:**

*Be careful not to damage the cylinder head cover.*

