



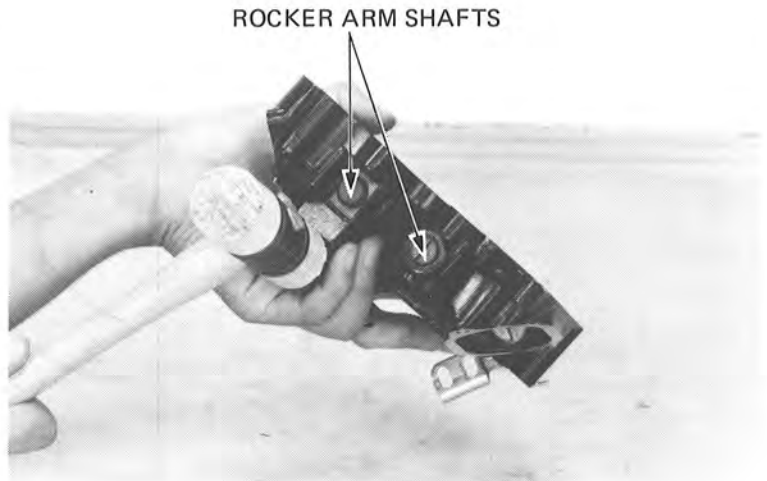

Remove the rocker arm shafts by tapping them with a plastic hammer.

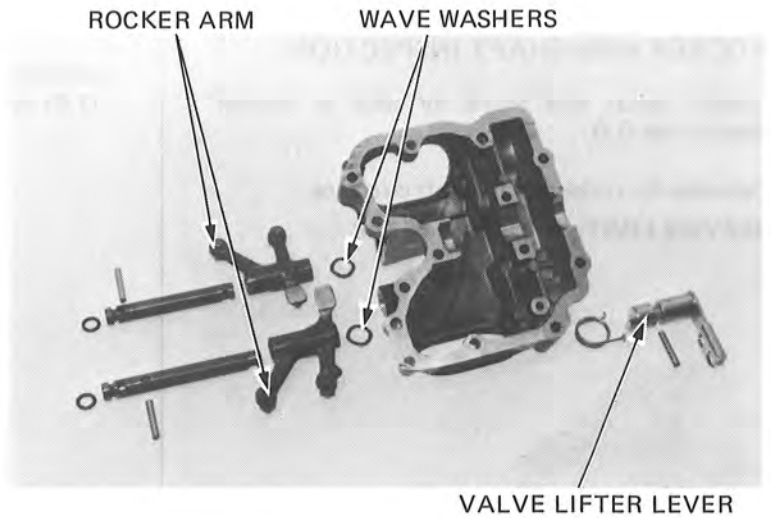

Remove the rocker arms and wave washers from the shafts.
Remove the valve lifter lever and spring.



ROCKER ARM INSPECTION

Inspect the rocker arms for damage, wear or clogged oil holes.

NOTE

If any rocker arms require servicing or replacement, inspect the cam lobes for scoring, chipping or flat spots.

