




Turn the crankshaft counterclockwise until the cam sprocket cut-outs are even with the end of the cylinder head as shown.

Pull the cam sprocket off the camshaft and remove the cam chain from the cam sprocket.

Suspend the cam chain with a piece of wire to keep it from falling into the crankcase.

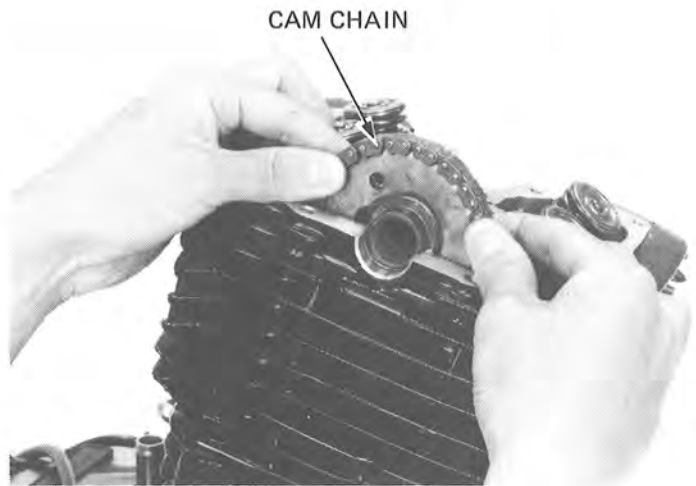

Pull the camshaft up as shown and remove the sprocket and camshaft.



CAMSHAFT INSPECTION

Check the camshaft journals for wear or damage.
Measure the O.D. of each journal.

SERVICE LIMITS:

RIGHT: 23.9 mm (0.94 in)

LEFT : 19.9 mm (0.78 in)

