




CYLINDER HEAD/VALVES

Remove the carbon deposits from the combustion chambers.
Clean any gasket material from the cylinder head.

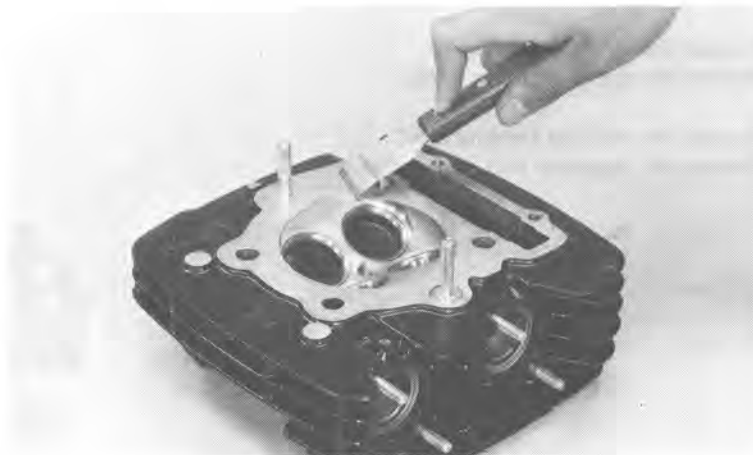

CYLINDER HEAD INSPECTION

Check the spark plug hole and valve areas for cracks.
Check the cylinder head diagonally two ways for warpage with a straight edge and a feeler gauge.

SERVICE LIMIT:
0.10 mm (0.004 in)



VALVE SPRING INSPECTION

Measure the free length of the inner and outer valve springs.

SERVICE LIMITS:
INNER: 37.0 mm (1.46 in)
OUTER: 35.0 mm (1.39 in)

