



CYLINDER/PISTON

Install the piston rings with the marks facing up.

NOTE

Avoid piston and piston ring damage during installation.
Install the oil ring spacer first, then install the side rails.

Space the piston ring end gaps 180 degrees apart as shown.

Do not align the oil ring (side rails) gaps.

After installation, the rings should rotate freely in the ring lands.

