





RIGHT CRANKCASE COVER REMOVAL

Remove the seat and fuel tank.
Drain oil from the engine.
Remove the skid plate.

Remove the kick starter pedal.
Remove the right foot peg bolt and foot peg.
Remove the rear brake pedal.
Disconnect the clutch cable and the pulse generator wires.

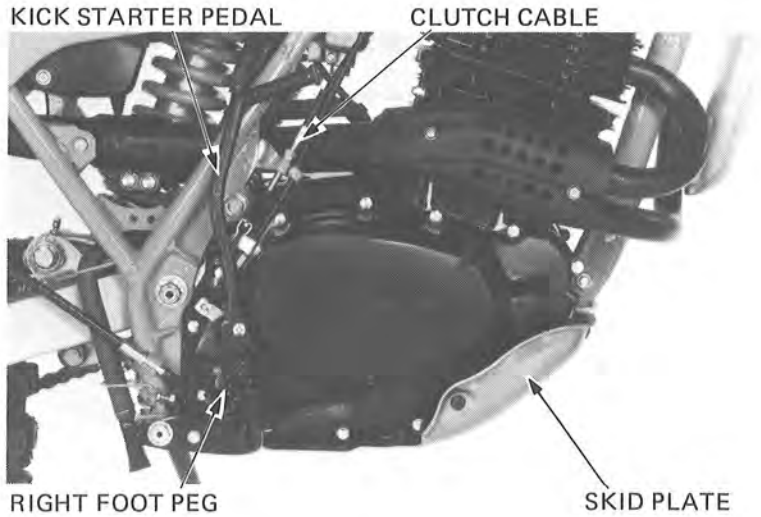

Disconnect the decompressor cable.
Remove the bolts holding the right crankcase cover, and remove the cover.

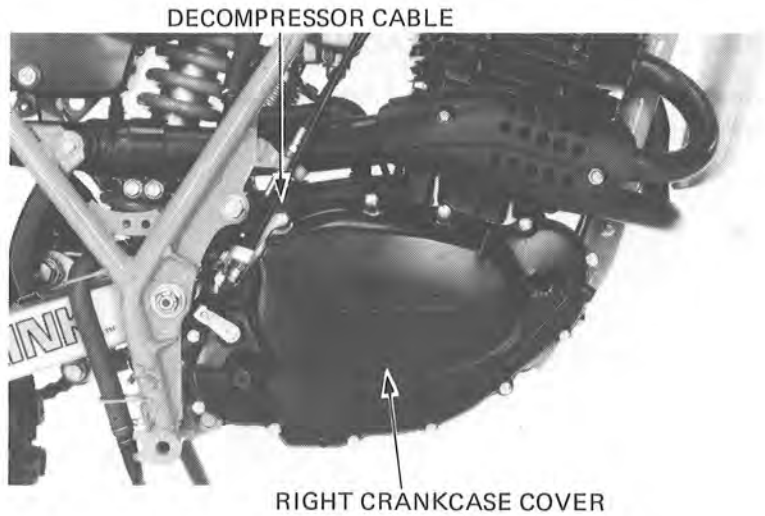

CLUTCH LIFTER ARM DISASSEMBLY

Remove the spring pin.
Remove the lifter arm and return spring.

