




CLUTCH

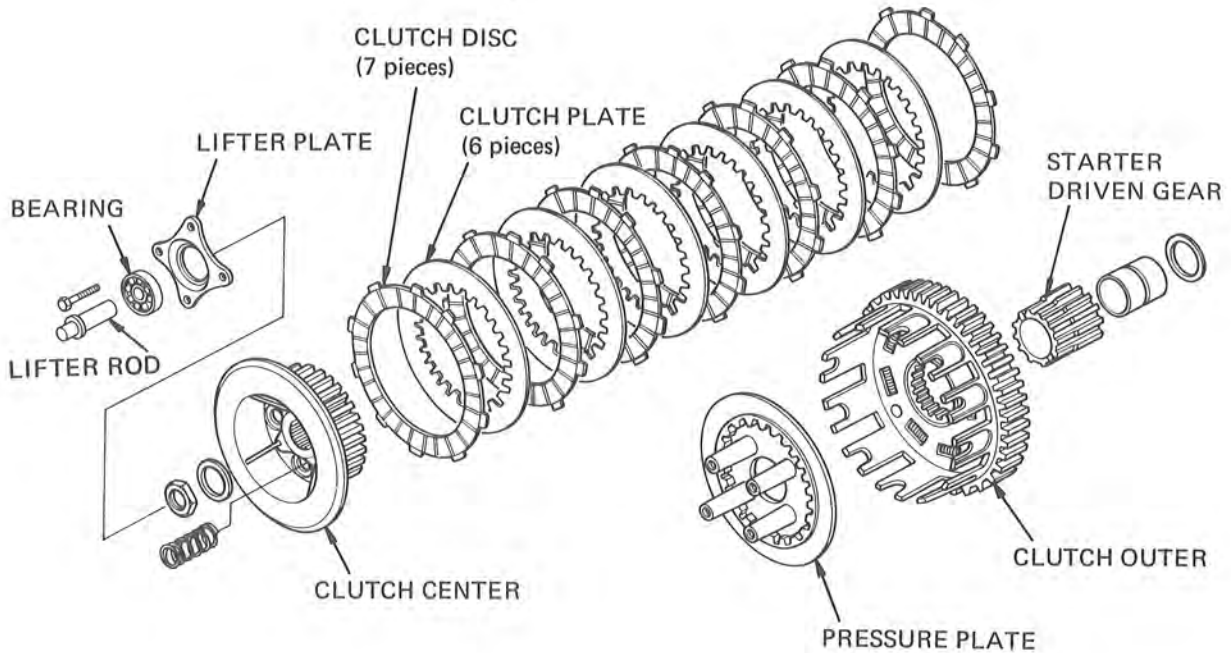

REMOVAL

- Remove the lifter rod and bearing.
- Remove the four bolts.
- Remove the clutch lifter plate and springs.

NOTE

Loosen the bolts in a crisscross pattern in 2-3 steps.
--

