



SERVICE INFORMATION	9-1
LEFT CRANKCASE COVER REMOVAL	9-2
AC GENERATOR ROTOR REMOVAL	9-2
AC GENERATOR ROTOR INSTALLATION	9-3
LEFT CRANKCASE COVER INSTALLATION	9-3

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- This section pertains to removal and installation of the AC generator. These operations can be accomplished with the engine in the frame after removing the left crankcase cover.
- For AC generator inspection, refer to section 16.

TOOLS

COMMON

- Universal Holder 07725-0030000 (commercially available) or Band Strap wrench (commercially available in U.S.A.)
- Rotor Puller 07733-0020001 (or 07933-3290001)

TORQUE VALUES

- AC generator 100-120 N·m (10.0-12.0 kg-m, 72-87 ft-lb)
- Left crankcase cover 8- 12 N·m (0.8-1.2 kg-m, 6-9 ft-lb)
- Gearshift pedal 8- 12 N·m (0.8-1.2 kg-m, 6-9 ft-lb)
- Drain plug 20- 30 N·m (2.0-3.0 kg-m, 14-21 ft-lb)