




AC GENERATOR

LEFT CRANKCASE COVER REMOVAL

Remove the seat and fuel tank.
Remove the AC generator wire bands and disconnect the wire.
Remove the wire harness bands.

Remove the skid plate, drive sprocket cover and gearshift pedal.

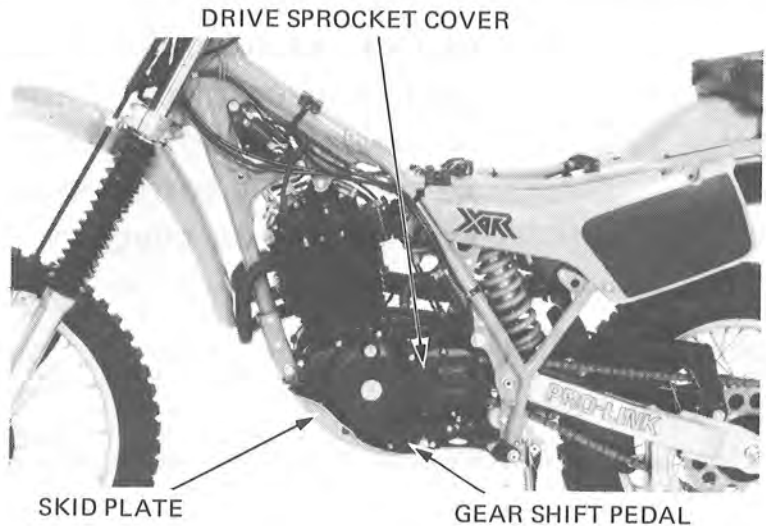

Drain the engine oil.
Remove the chain.
Remove the left crankcase cover.



AC GENERATOR ROTOR REMOVAL

Shift the transmission into top gear.
Hold the drive sprocket with a universal holder, or hold the flywheel with a band strap wrench.
Remove the rotor bolt and remove the rotor using the puller.

