


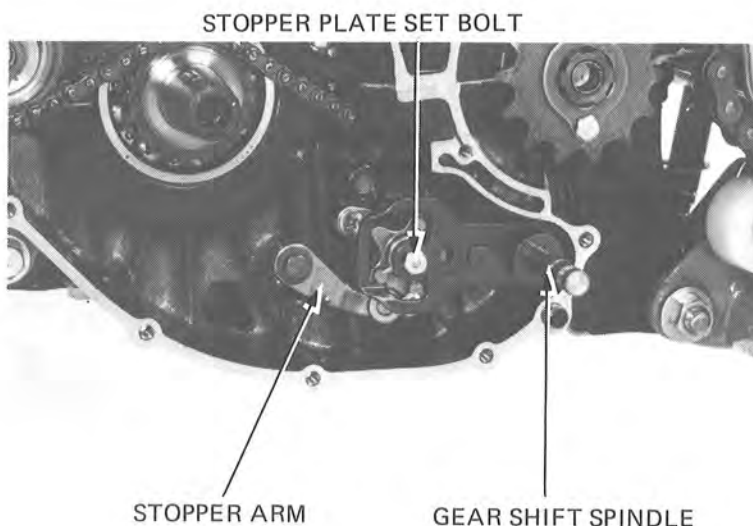


GEARSHIFT LINKAGE DISASSEMBLY

Loosen the stopper plate set bolt.
Remove the gearshift spindle.
Remove the shift stopper arm and spring.



Remove the circlip, spring and shift plate.
Remove the thrust washer, circlip and return spring.

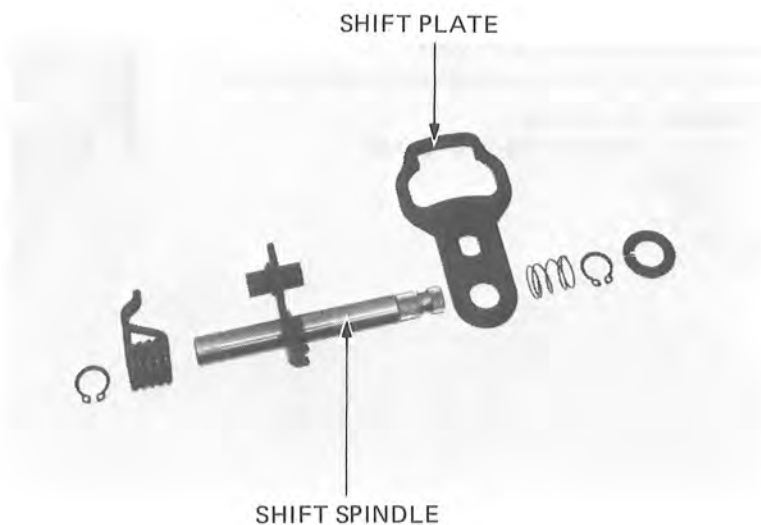

AC GENERATOR ROTOR INSTALLATION

Install the gearshift linkage.

Install the rotor by aligning the woodruff key with the rotor keyway.

Shift the transmission into top gear.
Hold the drive sprocket with a universal holder, or hold the flywheel with a band strap wrench.
Tighten the rotor bolt.

TORQUE: 100–120 N·m
(10.0–12.0 kg-m, 72–87 ft-lb)

