




CRANKCASE

CRANKCASE SEPARATION

Remove the balancer holder lock bolt and spring.
Remove the cam chain tensioner.
Remove the oil pipe.
Remove the cam chain.

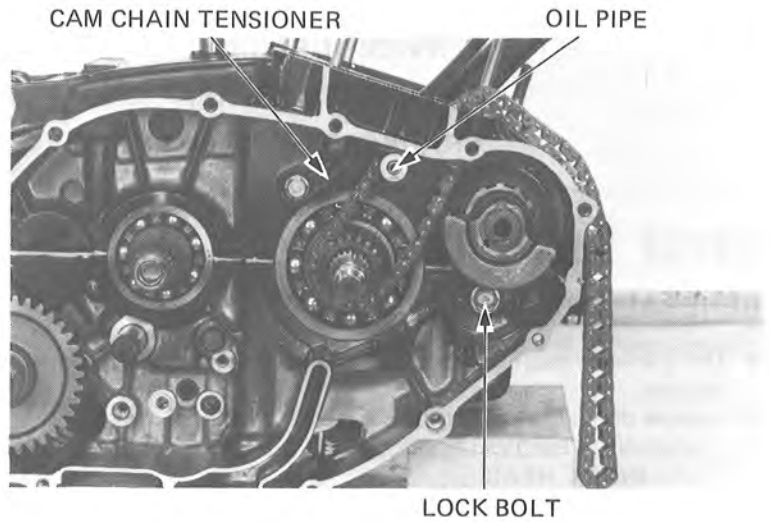

Remove the chain guide.



Turn the engine upside down and remove the bottom crankcase bolts.

