




REAR BALANCER REMOVAL

Remove the needle bearing and thrust washer from the mainshaft.
Remove the rear balancer, thrust washer and needle roller bearing.



Measure the balancer I.D.

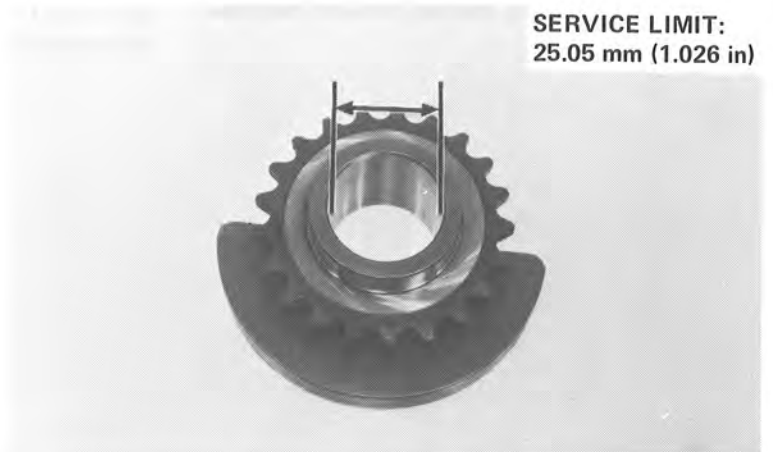

CRANKSHAFT REMOVAL

Separate the crankcase (Page 10-2).
Remove the crankshaft.

