



## KICK STARTER DISASSMBLY

Remove the thrust washer, kick starter cam, spring and spring seat.

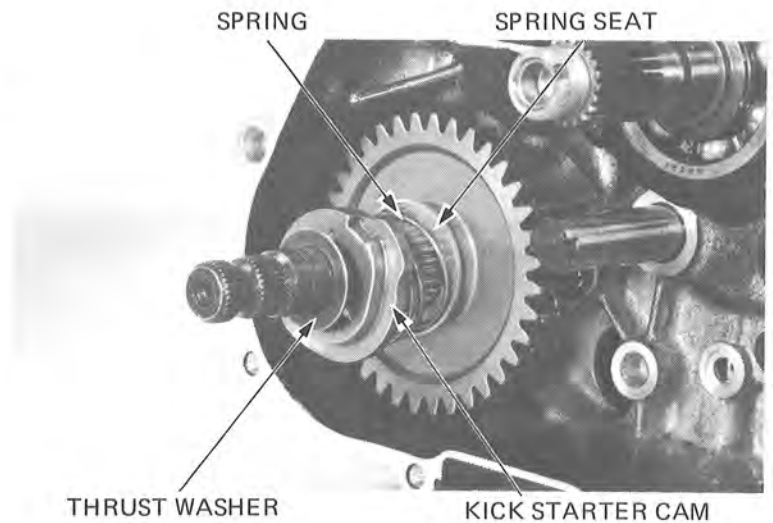

Remove the 16 mm circlip, thrust washer and collar. Remove the kick starter spring and spindle.

Remove the kick starter stopper plate and spring hook pin.

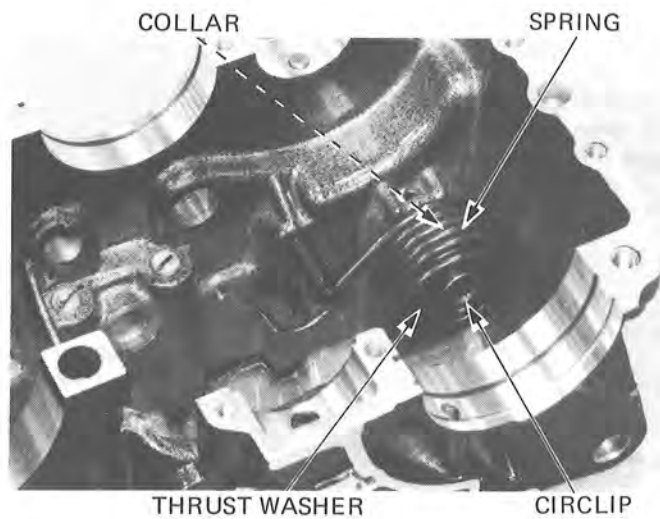

## KICK STARTER SPINDLE DISASSEMBLY

Remove the thrust washer, ratchet spring and starter ratchet from the spindle.

Remove the 22 mm circlip, thrust washer and kick starter pinion from the other end.

