




TRANSMISSION

Install the spindle in the crankcase with the spring hole facing up.

Pour engine oil into the oil hole.
Install the starter spring and collar.



Place the spring on the spring hook pin.
Install the plain washer.
Install the 14 mm circlip with the chamfered edge facing outward.
Make sure it fits properly in the shaft groove.

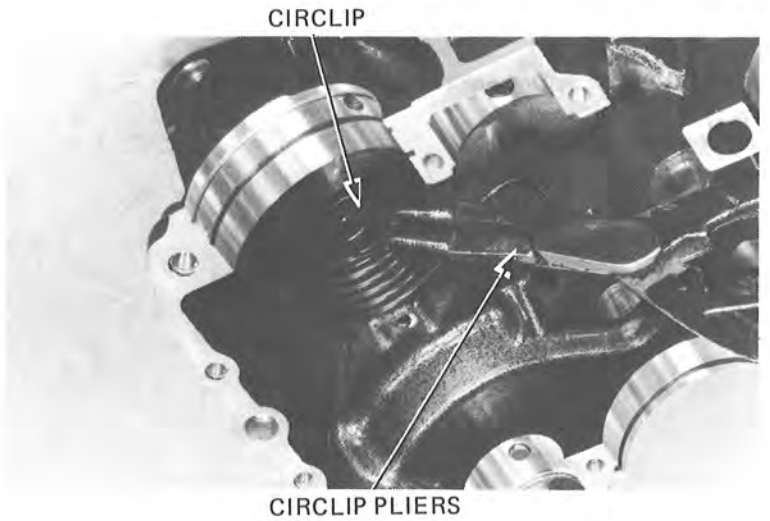

Install the spring seat and spring, align the cam and shaft index marks and install the kick starter cam and thrust washer.

