



## HEADLIGHT

### HEADLIGHT REMOVAL

Unscrew the headlight case mounting bolts and remove the headlight case.

MOUNTING BOLTS




Disconnect the headlight wire connectors.  
Remove the headlight mounting and adjusting screws.  
Remove the headlight.

### HEADLIGHT INSTALLATION

Install the headlight in the reverse order of removal.  
Adjust the headlight vertical beam.

HEADLIGHT

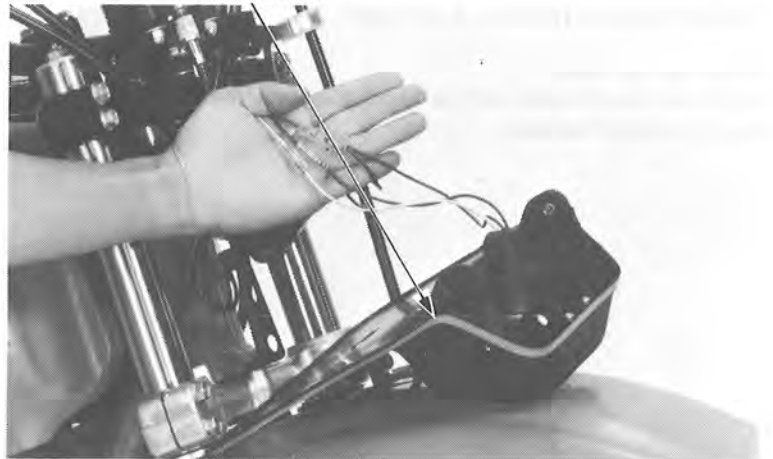

## SPEEDOMETER

### SPEEDOMETER REMOVAL

Remove the headlight.  
Disconnect the speedometer cable.  
Remove the speedometer mounting nuts and speedometer.

### SPEEDOMETER INSTALLATION

Install the speedometer in the reverse order of removal.

SPEEDOMETER CABLE

SPEEDOMETER

