



**FRONT WHEEL  
BRAKE/SUSPENSION/STEERING**

Adjust the brake arm connecting rod whenever the cam, arm or connecting rod are replaced.


While pushing the brake shoes in toward one another by hand to remove any clearance between the shoes and brake cams, loosen the brake arm connecting rod lock nut, turn the rod until it shows free play, and then turn the rod in direction A just enough to remove that free play.

**NOTE**

You are looking for the point that free play is just removed.

Tighten the lock nut.

Make sure that both brake cams are parallel to each other and that arms A and B start to move at the same time when the brake is applied.

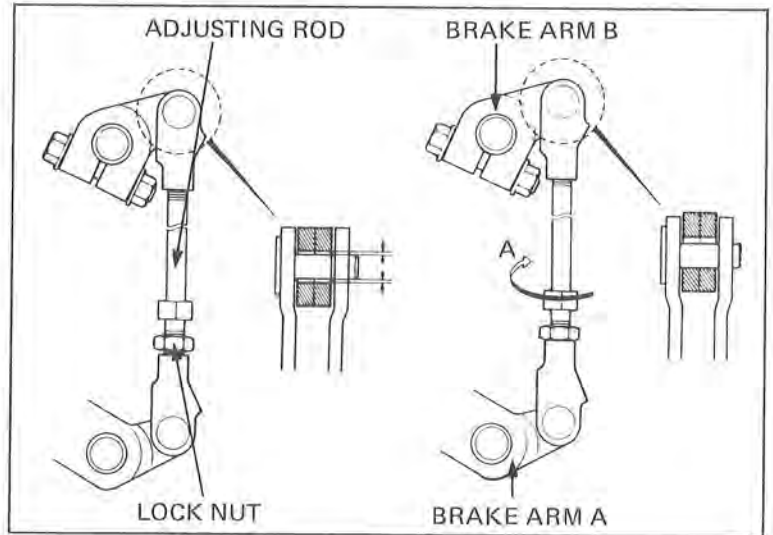

**FRONT WHEEL DISASSEMBLY**

- Remove the tire and tube.
- Remove the dust seal.
- Remove the left bearing.
- Remove the spoke flange nuts and spoke flange.
- Remove the collar.
- Remove the right bearing.

