



FRONT WHEEL ASSEMBLY

Pack the bearing cavities with grease.
 Drive in the left bearing.
 Install the distance collar.
 Drive in the right bearing.

NOTE

Install the bearings with the sealed end toward the outside. Be sure to drive the bearing in squarely.


WARNING

Grease on the brake linings reduces stopping power. Keep grease off the brake linings. Wipe excess grease off the cam.



TOOLS
 BEARING DRIVER OTR 32x35 mm
 BEARING DRIVER HANDLE OUTER A
 DRIVER PIVOT 15 mm

Insert the tang on the gear box in the slot in the front wheel and install the gear box on the wheel.

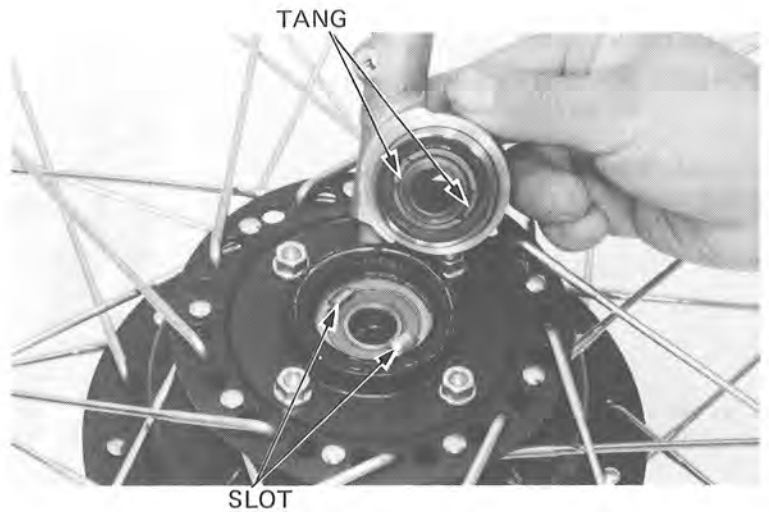

FRONT WHEEL INSTALLATION

Clean the axle shaft and holder.
 Install the holder with the "UP" mark facing upwards.
 Install the axle shaft nuts but do not tighten at this time.

NOTE

Set the tang on the gear box under the tab on the fork tube.

