


Drain the fork oil by removing the drain plug.
Hold the fork slider in a vise with soft jaws or a shop towel and hold the fork piston with a holder.
Remove the hex bolt.

CAUTION:

Do not distort the fork slider in a vise.

6 mm HEX WRENCH (07917-3230000)

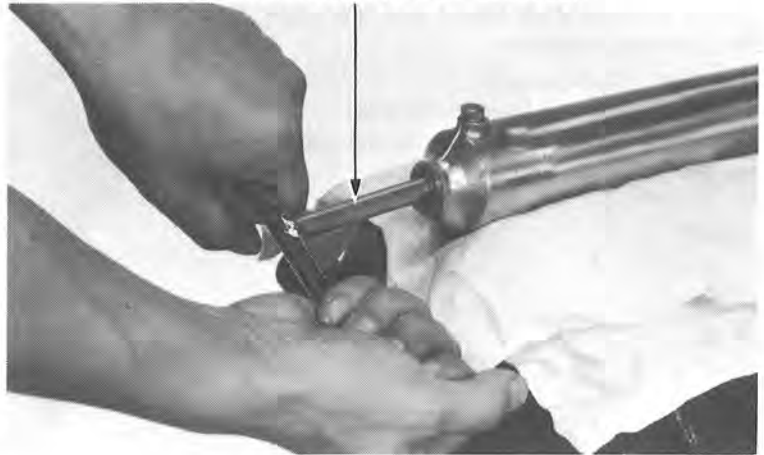

Hold the tube in a vise with soft jaws or a shop towel, avoiding the sliding surface.
Remove the fork cap bolt.

WARNING

The cap bolts are under spring pressure. Use care when removing and wear eye and face protection.

FORK BOLT



Removing the fork spring, fork piston and rebound spring.

Pour out any remaining fork fluid.

