




### INSTALLATION

Install the fork tubes in the bridge and steering stem while rotating them by hand.

#### NOTE

Ensure that the lower groove of each tube aligns with the top of the fork bridge.

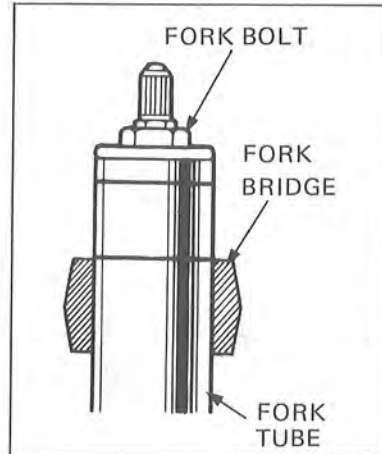


Tighten the fork top bridge pinch bolt and steering stem pinch bolts.

#### TORQUE

Fork top bridge: 18–25 N·m (1.8–2.5 kg·m,  
Pinch bolt 13–18 ft·lb)

Steering stem: 18–30 N·m (1.8–3.0 kg·m,  
Pinch bolt 13–22 ft·lb)

Bring the top of each boot into contact with the steering stem and tighten the clamp.  
Install the front wheel (Page 13-11).

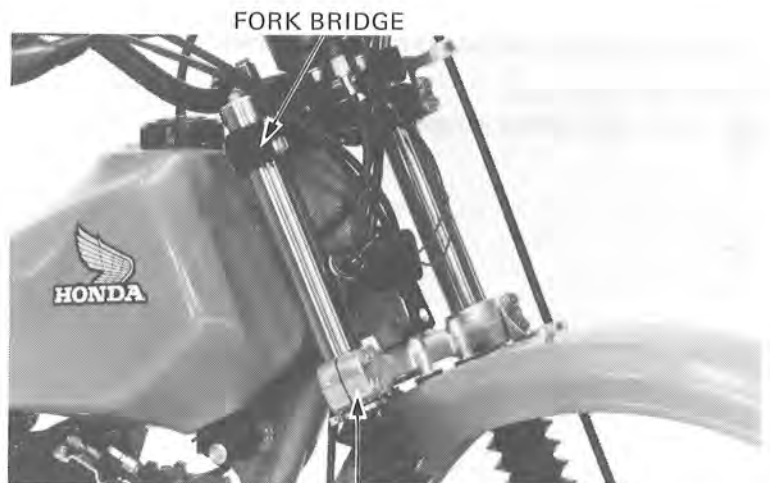

STEERING STEM

## STEERING STEM

### FORK TOP BRIDGE REMOVAL

Remove the headlight (Page 13-3).  
Disconnect the wires at the connectors.  
Remove the following parts:  
Speedometer (Page 13-3).  
Handlebar (Page 13-4).  
Front wheel (Page 13-6).  
Front fender.  
Front fork.  
Front brake.

