

**FRONT WHEEL
BRAKE/SUSPENSION/STEERING**



Remove the steering stem nut.
Loosen the fork bridge bolts and remove the bridge.
Remove the front fork tube assemblies.

SOCKET WRENCH 30 x 32 mm



EXTENSION BAR

STEERING HEAD ADJUSTER REMOVAL

Remove the rubber cover.
Remove the steering head adjuster.

EXTENSION BAR



STEERING STEM SOCKET
(07916-3710100)

Remove the steering stem.

STEERING STEM

