




Remove the ball race with the Ball Race Remover.

**BALL RACE REMOVER (07953-MA00000)**



Remove the steering stem bolt.

**STEERING STEM BOLT**

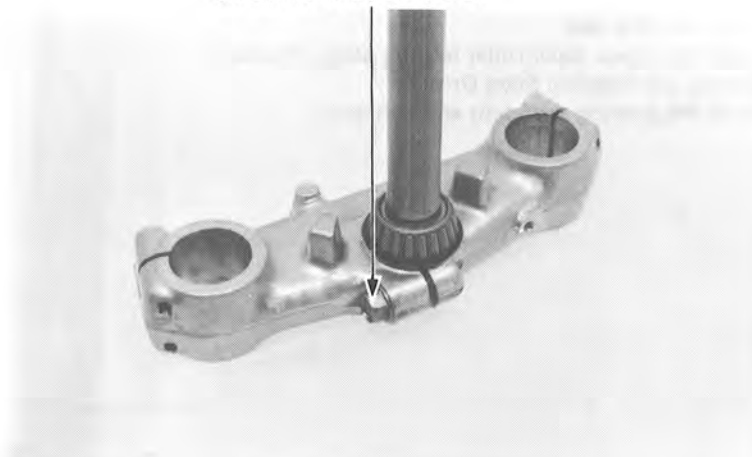

Support the steering stem on blocks in a hydraulic press as shown.  
Press out the lower taper roller bearing.

