



Install the steering head adjusting nut and torque with the steering stem socket.

**TORQUE: 5.5 – 6.5 N·m (0.55–0.65 kg·m,
4 – 5 ft·lb)**

STEERING STEM SOCKET
(07916–3710100)



Install the fork bridge.

Tighten the steering stem nut.

TORQUE: 80–120 N·m (8–12 kg·m, 60–90 ft·lb)

Install the:

- front forks (page 13-19)
- front fender
- front wheel (page 13-11)
- handle bar. (page 13-4)

Install the speedometer and headlight (page 13-3).
Connect the wiring.