



Install the spring, spring seat and seat stopper.
Position the upper and lower shock absorber mounts so as to allow holes in the mounts to face in the same direction.
Be sure the adjusting mark should face opposite to the reservoir hose.



Measure the spring's length.
Turn the adjusting nut to obtain the standard spring length.

STANDARD SPRING LENGTH: 212.6 mm (8.4 in)

NOTE

One turn equals 1.5 mm (0.06 in)

To increase spring preload; tighten the adjusting nut to shorten the spring length up to 5 mm (1/4 in) and tighten the lock nut.


CAUTION:

Do not shorten the spring more than 5 mm (1/4 in), or damage to the spring could result.

To reduce spring preload; loosen the adjusting nut to increase spring length 5 mm (1/4 in) and tighten the lock nut.

CAUTION:

Do not ride the motorcycle without the spring having preload. Loss of rider control could result.

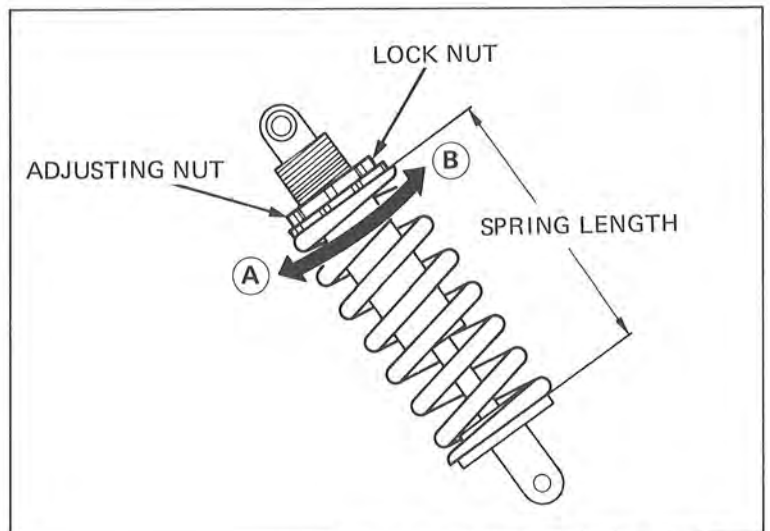

A: SHORTEN THE SPRING LENGTH
B: INCREASE THE SPRING LENGTH