


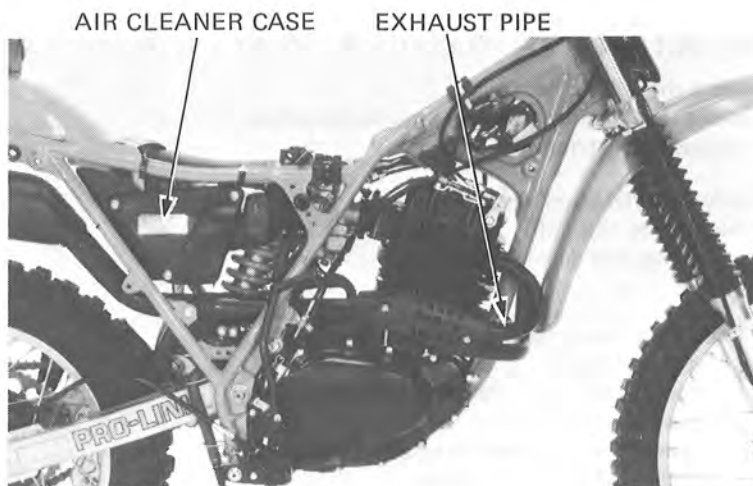


Install the following:  
air cleaner case  
exhaust pipe  
muffler  
side covers  
seat



## SWING ARM

### SWING ARM REMOVAL

Raise the rear wheel off the ground with a jack or block under the engine.  
Remove the rear wheel (Page 14-3).  
Remove the rear shock absorber (Page 14-10).  
Remove the swing arm pivot bolt.

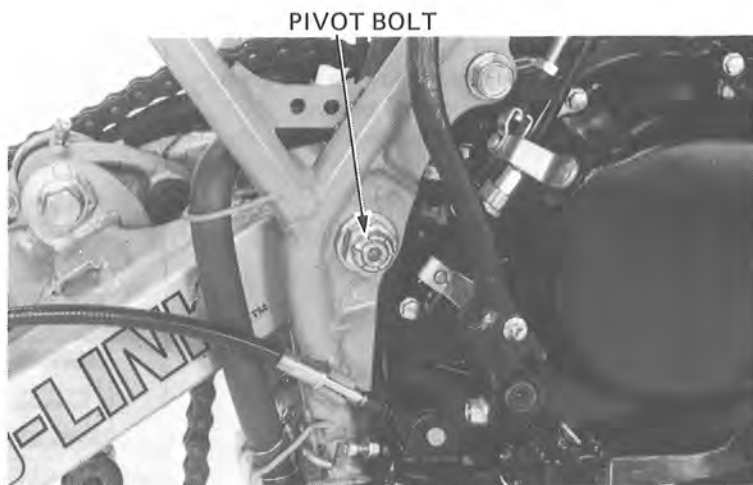

### DISASSEMBLY

Remove the shock arm from the swing arm.  
Remove the chain guide, chain case and mud guard.

