

REAR WHEEL BRAKE/SUSPENSION



HONDA
XR500R

Apply grease to the swingarm pivot through the grease fitting.

Apply molybdenum disulfide (MoS₂) paste to the linkage bushings through the grease fittings on the linkage pivots (page 3-19).



BRAKE PEDAL

REMOVAL

Disconnect the brake pedal spring.
Remove the right foot peg mounting bolt.
Disconnect the brake cable and remove the right foot peg and brake pedal.

INSTALLATION

When assembling, apply grease to the brake pedal pivot bolt, dust cover and dust seals.

Install the brake pedal in the reverse order of removal.

